



## INSPECTION

### INSPECT ENGINE ROOM R/B RELAY CIRCUIT (See Page BE-8)

#### HINT:

The (Headlight, DIM, Tail relay) is built in engine room junction block. Also the relay is constructed with a relay block that is in the junction block as a unit. To disconnect the wire harness connecting with relay block is impossible. If the relay has a malfunction, replace it with junction block assembly wire harness together.