

I25784


## INSPECTION

### 1. INSPECT POWER WINDOW MASTER SWITCH CIRCUIT

Check the voltage and continuity of each terminal of the wire harness side connector.

Tester connection	Condition	Specified condition
2 (GND) – Body ground	Constant	Continuity
10 (BDR) – 2 (GND)	Constant	10 – 14V
9 (CPUB) – 2 (GND)	Constant	10 – 14V
20 (SIG) – 2 (GND)	Ignition switch OFF → ON	0V → 10 – 14V
1 (UP) – 11 (DN)	Constant	Continuity
5 (LMT) – 13 (SGND)	Driver door glass fully closed	No continuity
	Driver door glass opened by 4 mm (1.06in.)	Continuity

If the circuit is not as specified, inspect the circuits connected to other parts.

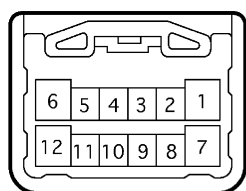

I25785

### 2. INSPECT POWER WINDOW SWITCH CIRCUIT

Check the voltage and continuity of each terminal of the wire harness side connector.

Tester connection	Condition	Specified condition
7 (GND) – Body ground	Constant	Continuity
12 (BDR) – 7 (GND)	Constant	10 – 14V
6 (UP) – 1 (DN)	Constant	Continuity
3 (LMT) – 5 (SGND)	Driver door glass fully closed	No continuity
	Driver door glass opened by 4 mm (1.06in.)	Continuity

If the circuit is not as specified, inspect the circuits connected to other parts.