



## INSPECTION

### INSPECTION TRANSPONDER KEY COIL CONTINUITY

Check that continuity exists between terminals 1 and 2.  
If continuity is not as specified, replace the coil.