BO1U0-01

REASSEMBLY

Reassembly is in the reverse order of disassembly (See page BO-24).