## **REASSEMBLY**

BO1U4-01

Reassembly is in the reverse order of disassembly (See page BO-30).