REASSEMBLY

BO1U8-01

Reassembly is in the reverse order of disassembly (See page BO-35).