


DISASSEMBLY

1. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT
2. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT
3. REMOVE DEFROSTER NOZZLE
4. REMOVE CENTER BRACKET
5. REMOVE NO. 1 HEATER TO REGISTER DUCT
6. REMOVE INSTRUMENT PANEL WIRE HARNESS
7. REMOVE NO. 5 HEATER TO REGISTER DUCT

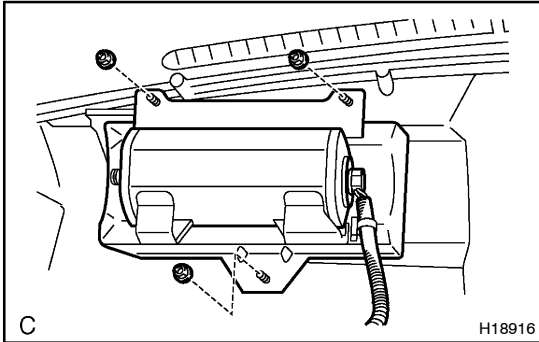

8. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

Remove the 3 nuts and the front passenger airbag assembly.

Torque: 6.0 N·m (61 kgf·cm, 53 in.·lbf)

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.

NOTICE:

At the time of reassembly, please refer to the following items.

- Make sure that the front passenger airbag assembly is installed with the specified torque.
- If the front passenger airbag assembly has been dropped, or if there are cracks, dents or other defects in the case or the connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.

9. REMOVE NO. 1 REGISTER

10. REMOVE NO. 4 REGISTER