

REMOVAL

1. REMOVE SEAT TRACK OUTER COVERS

Using a screwdriver, remove the 4 seat track outer covers.

HINT:

Tape up the screwdriver tip before use.

2. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

- (b) Disconnect the connectors, then remove the front seat.

NOTICE:

- **When handling the airbag connector, take care not to damage the airbag wire harness.**
- **Be careful not to damage the body.**