

## REASSEMBLY

### 1. w/ Dual Stage Airbag Type (Driver's Side):

#### INSTALL SEAT POSITION SENSOR

Install the seat position sensor with a new bolt, then connect the connector.

**Part No.:**


**Bolt:** 90 119-06871

**Torque:** 8.0 N·m (82 kgf·cm, 7 1 in.·lbf)

### 2. INSTALL SEAT POSITION CONTROL RELAY


Install the seat position control relay with the 2 bolts, then connect the connectors.

**Torque:** 5.5 N·m (56 kgf·cm, 49 in.·lbf)

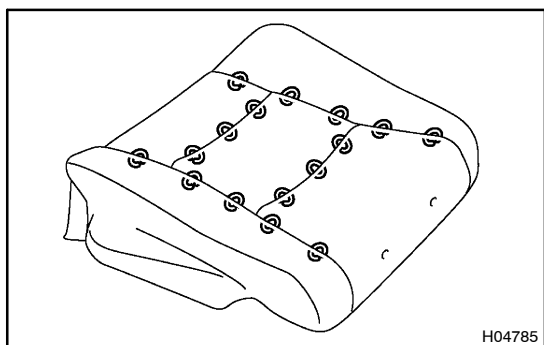


### 3. INSTALL SEATBACK COVER

Install the seatback cover to the seatback pad with new hog rings.

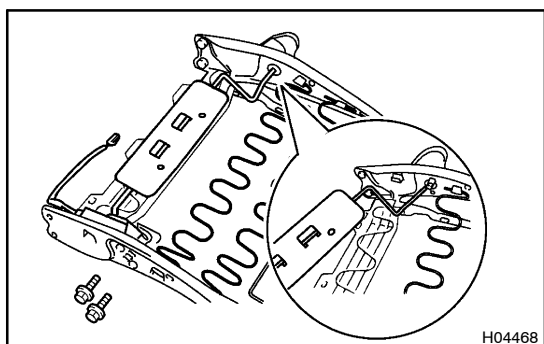

### 4. INSTALL LUMBER SUPPORT


Install the lumbar support and the spacer with the 2 bolts.

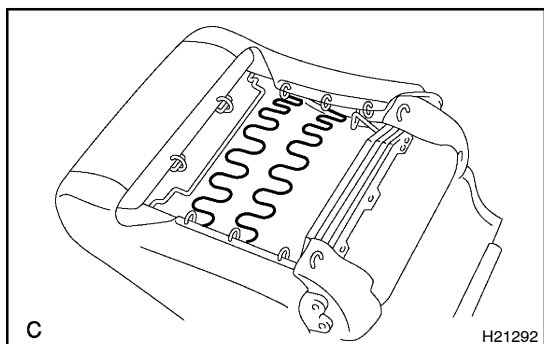

### 5. w/o Side Airbag:

#### INSTALL SEATBACK FRAME

- Install the seatback cover to the seatback frame.
- Install new hog rings.
- Install the 2 headrest supports.

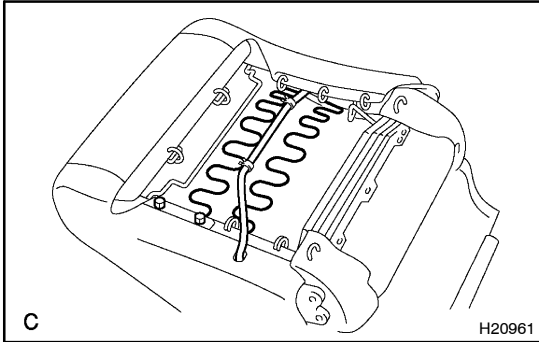

**6. w/ Side Airbag:**  
**INSTALL SEATBACK FRAME**


- (a) Install the seatback cover to the seatback frame.
- (b) Install new hog rings, the clamps and the 2 bolts.

**Torque: 4.7 N·m (48 kgf·cm, 42 in·lbf)**

- (c) Install the 2 headrest supports.

**7. INSTALL SEATBACK ASSEMBLY**

- (a) w/o Side Airbag:  
Install the RH reclining adjuster inside shield with a screw.

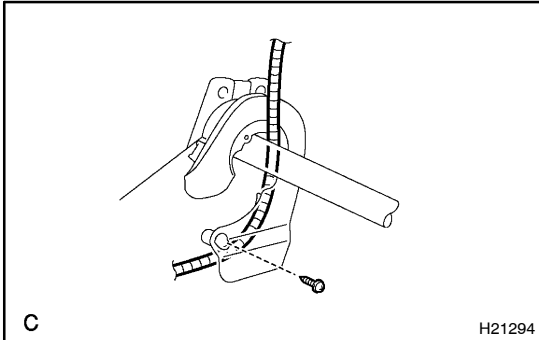


- (b) w/ Side Airbag:  
Place the airbag connector along the inner seat adjuster, and then install the RH reclining adjuster inside shield with a screw so that the connector is placed in between.

**NOTICE:**

**When handling the airbag connector, take care not to damage the airbag wire harness.**


- (c) Install the LH reclining adjuster inside shield with a screw.

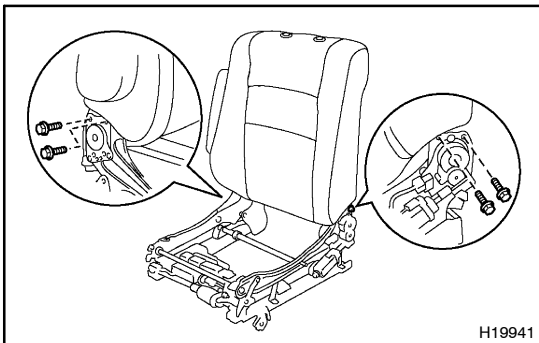

- (d) Install the seatback assembly with the 4 bolts.

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

- (e) Install new hog rings.

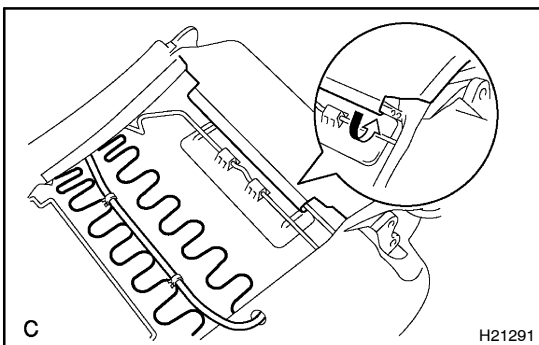


- (f) Hang the hook.
- (g) Connect the connectors.

**8. INSTALL HEADREST**

**9. INSTALL SEAT CUSHION COVER (See page BO-105)**

**10. INSTALL SEAT CUSHION FRAME**

- (a) Install the seat cushion frame with new hog rings to the seat cushion cover with pad.
- (b) Hang the hook.

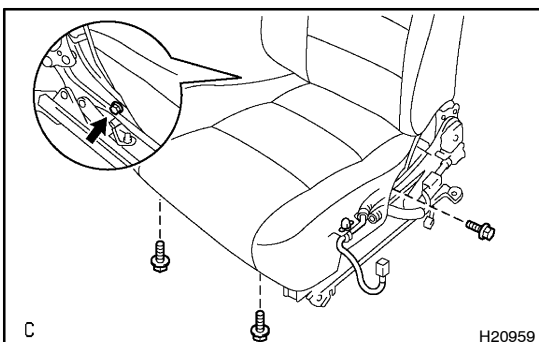


**11. INSTALL SEAT CUSHION ASSEMBLY**


- (a) Install the seat cushion assembly with the 4 bolts to the seat adjuster.

**Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)**


- (b) Engage the wire harness clamp.

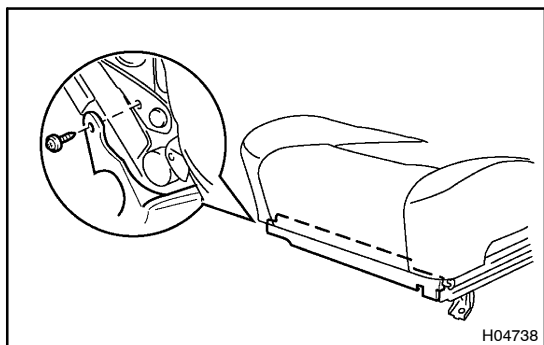**12. INSTALL FRONT SEAT CUSHION SHIELD**


Install the seat cushion shield with the screw.

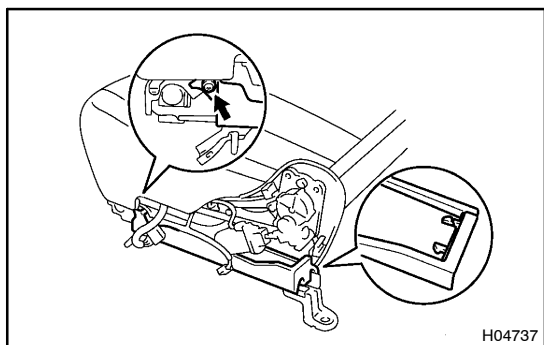**13. INSTALL LOWER SEAT CUSHION SHIELD**

Install the seat cushion shield with the screw.

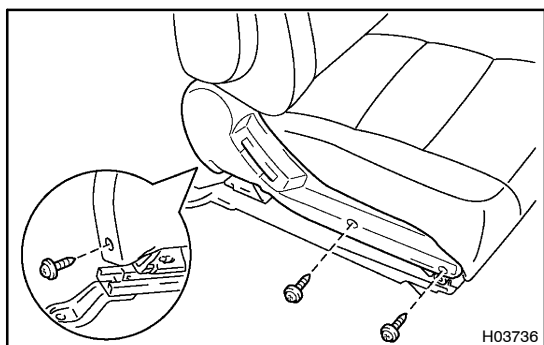**14. INSTALL SEAT CUSHION INNER SHIELD**

Install the seat cushion inner shield with the 3 screws.

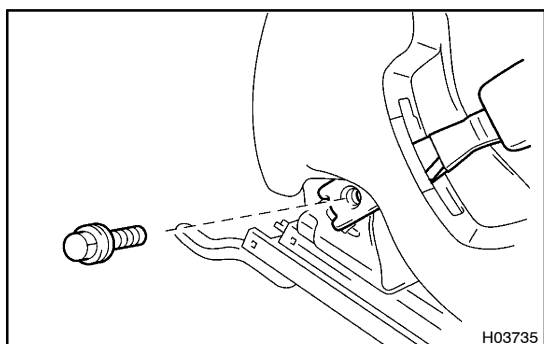
**15. INSTALL FRONT SEAT INNER BELT**

- (a) Engage the clamp, then connect the connector.
- (b) Install the inner belt with the bolt.

**Torque: 42 N·m (430 kgf·cm, 3 1 ft·lbf)**

**16. INSTALL SEAT CUSHION OUTER SHIELD**

- (a) Install the power seat switch with the 3 screws.
- (b) Install the lumbar support switch with the 2 screws.
- (c) Connect the connectors.

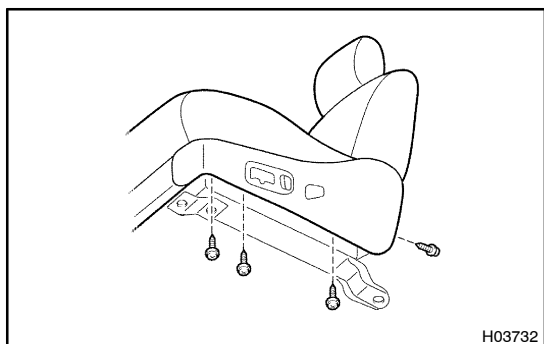

- (d) Install the seat cushion outer shield with the 4 screws.
- (e) Install the power seat switch knobs.

**17. INSTALL SEATBACK BOARD**