

REMOVAL

1. REMOVE SEAT TRACK OUTER COVER

Using a screwdriver, remove the 4 seat track outer covers.

HINT:

Tape up the screwdriver tip before use.

2. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors, then remove the front seat.

NOTICE:

- When handling the airbag connector, take care not to damage the airbag wire harness.
- Be careful not to damage the body.