


The ACTIVE TRC indicator blinks during TRC operation.

## WIRING DIAGRAM

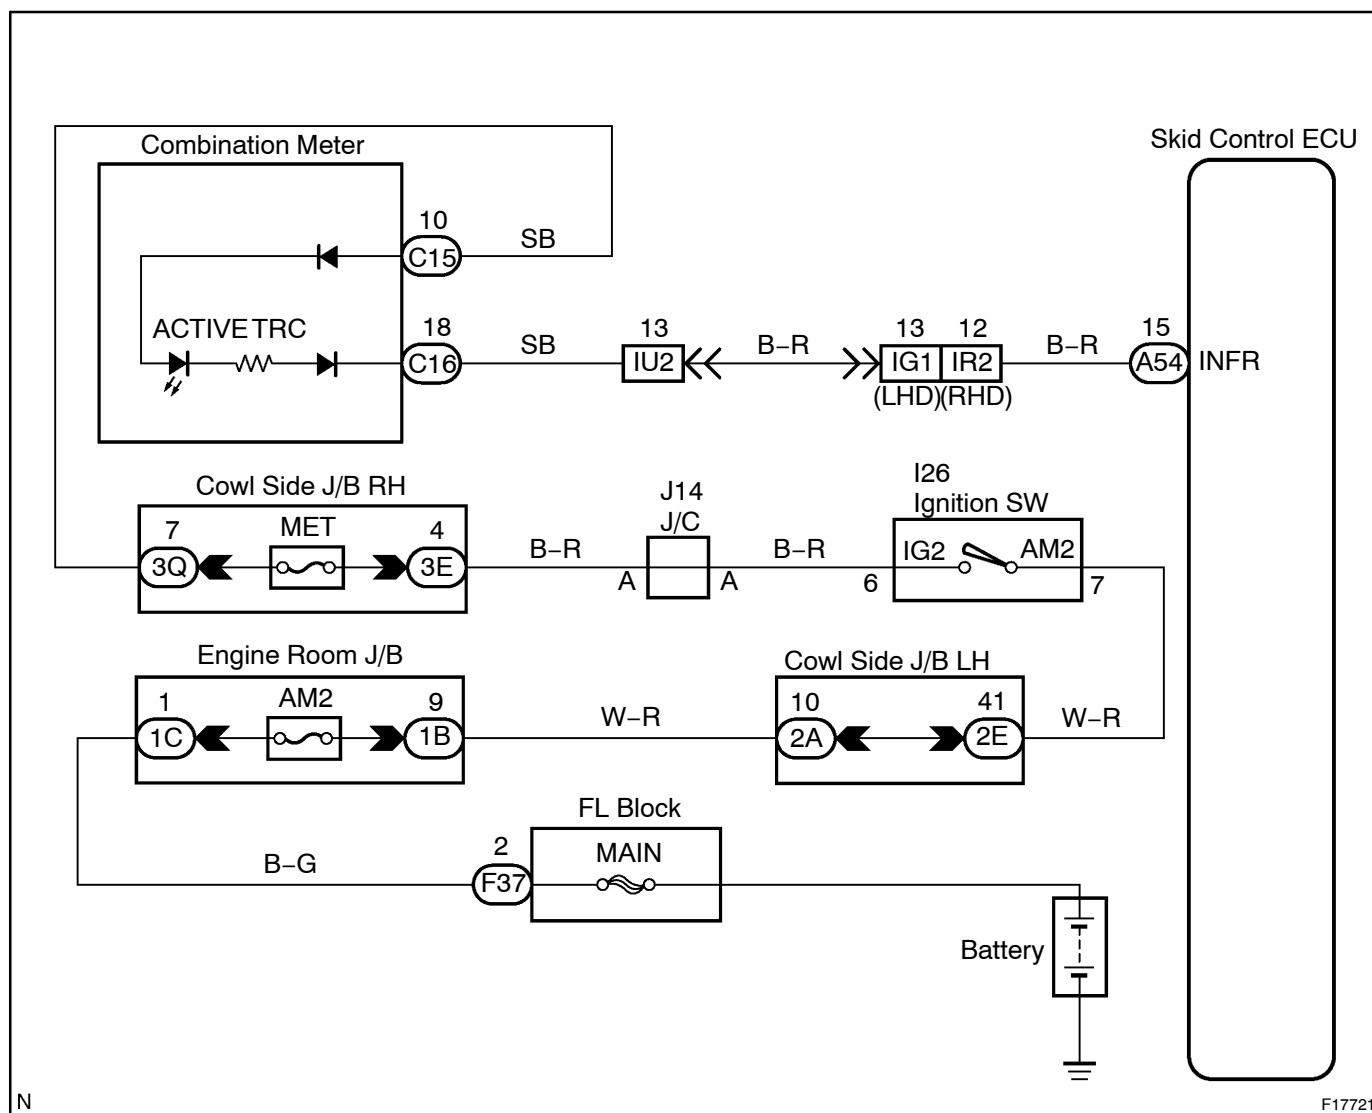

**INSPECTION PROCEDURE**


**1 Does the warning lights other than ACTIVE TRC indicator lights up?**

**YES**

**Go to step 3.**

**NO**

**2 Check IG1 No. 1 relay.**

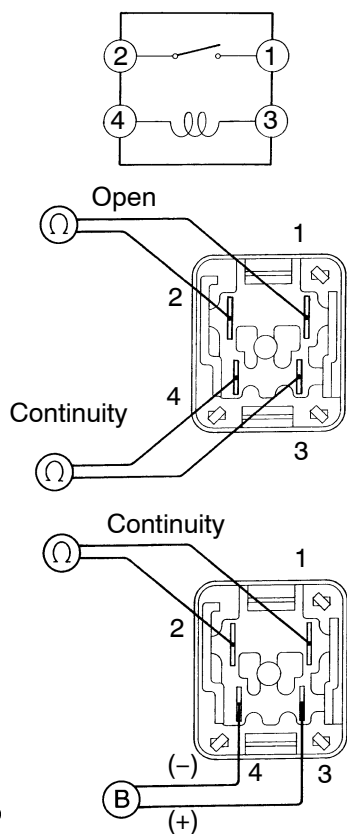

BE1840  
R15257  
R15258

F00044

**PREPARATION:**

Remove IG1 No. 1 relay from engine room J/B.

**CHECK:**

Check continuity between each pair of terminal of IG1 No. 1 relay.

**OK:**

|                   |            |
|-------------------|------------|
| Terminals 3 and 4 | Continuity |
| Terminals 1 and 2 | Open       |

**CHECK:**

- (a) Apply battery voltage between terminals 3 and 4.
- (b) Check continuity between terminals.

**OK:**

|                   |            |
|-------------------|------------|
| Terminals 1 and 2 | Continuity |
|-------------------|------------|

**NG**

**Replace IG1 No. 1 relay.**

**OK**

**Check for open circuit in harness and connector between IG1 No. 1 relay and combination meter (See page IN-38).**

**3 Check ACTIVE TRC indicator light.**

Open circuit in the combination meter ([See page BE-33](#)).

**NG**

**Repair ACTIVE TRC indicator light bulb or combination meter assembly.**

**OK****4 Check for short circuit in harness and connector between ACTIVE TRC indicator light and skid control ECU ([See page IN-38](#)).****NG**

**Repair or replace harness or connector.**

**OK**

**Check and repair skid control ECU.**