

# Abnormal noise and vibration in the steering wheel

## INSPECTION PROCEDURE

Check that the DTCs of VGRS, VSC and ABS are normal.

1	Check for abnormal noise and vibration when turning the steering wheel.
---	---

**PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the VGRS actuator connector from VGRS ECU.

**CHECK:**

Check for abnormal noise and vibration, after starting the engine and turning the steering wheel.

**OK:**

No abnormal noise and vibration

**NOTICE:**

When the ignition switch is ON with the steering actuator connector disconnected, DTC C1561/61 is stored. Clear this code after this check.

NG

Check and repair power steering system.

OK

Replace VGRS actuator.