

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspected Area	See page
<ul style="list-style-type: none">• With the ignition switch in ON position, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed.	<ul style="list-style-type: none">• SRS warning light circuit	DI-768
<ul style="list-style-type: none">• SRS warning light is always lit up even when ignition switch is in the LOCK position.		
<ul style="list-style-type: none">• With the ignition switch in ON position, the SRS warning light does not light up.		
<ul style="list-style-type: none">• DTC is not displayed.	<ul style="list-style-type: none">• TC terminal circuit	DI-773
<ul style="list-style-type: none">• SRS warning light is always lit up at the time of DTC check procedure.		
<ul style="list-style-type: none">• DTC is displayed without TC and CG terminal connection.		