

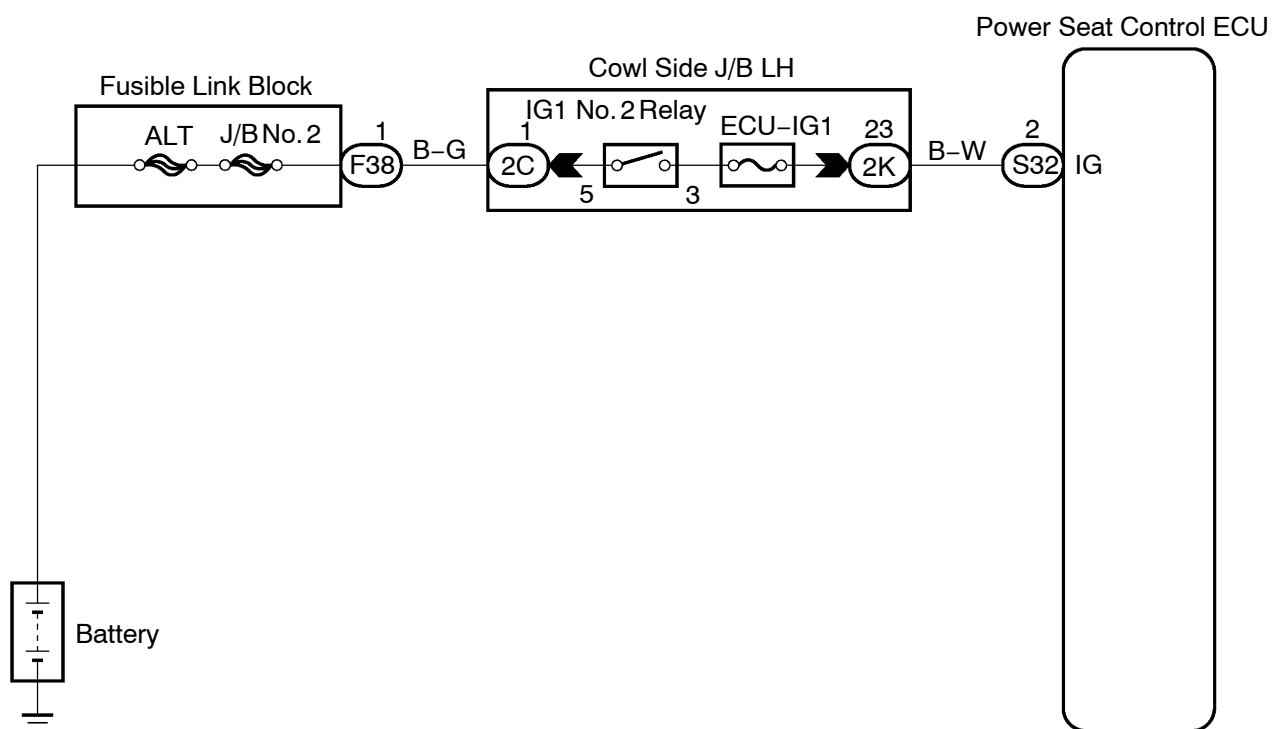
Ignition Switch Circuit

CIRCUIT DESCRIPTION

This circuit sends an ignition switch ON or OFF signal to the ECU.

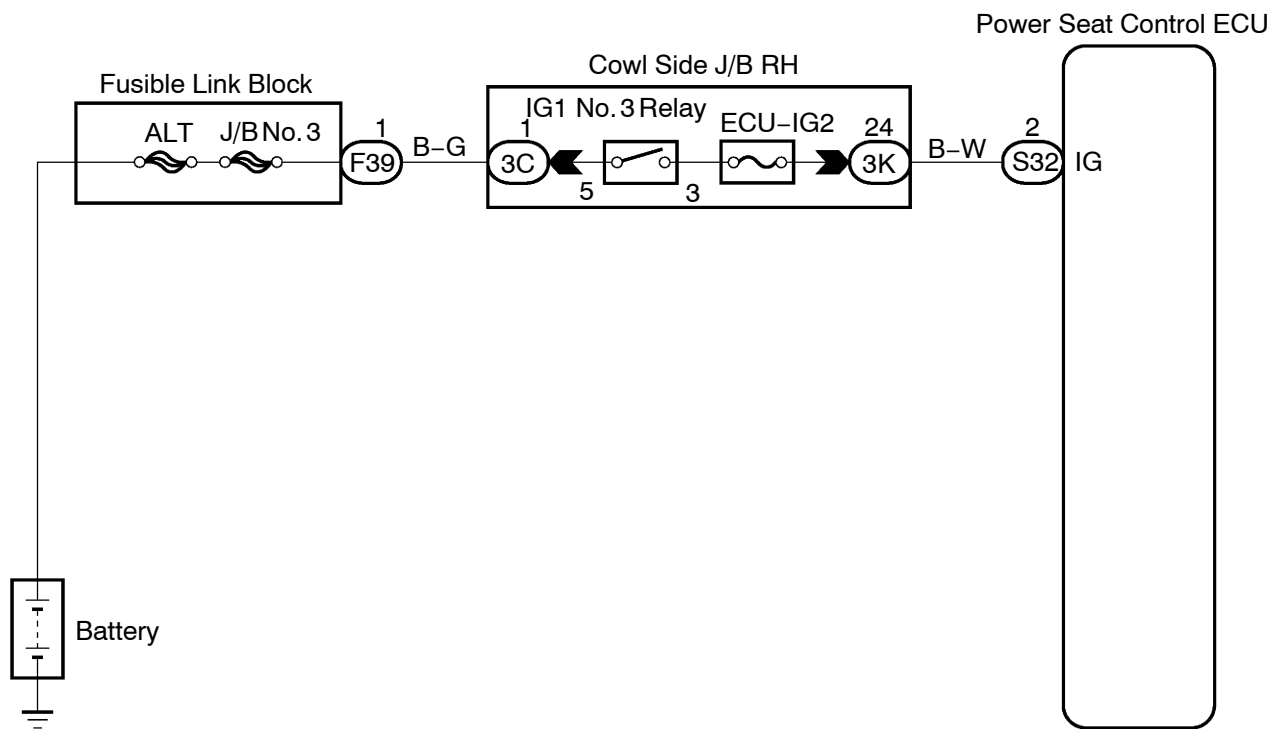
WIRING DIAGRAM

LHD Models:



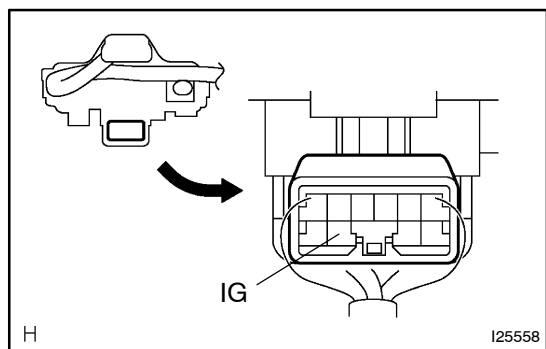
C

I25559

RHD Models:

C

I25559

INSPECTION PROCEDURE**1 Check ECU-IG1 fuse.****NG****Check for short in all the harness and components connected to ECU-IG1 fuse, and repair them.****OK****2 Check voltage between terminal IG of Power Seat Control ECU connector and body ground.****PREPARATION:**

Remove Power Seat Control ECU with connectors still connected.

CHECK:

Measure voltage between terminal IG of Power Seat Control ECU connector and body ground when ignition switch is ON and OFF.

OK:

Ignition switch	Voltage
ON	10 ~ 14 V
OFF	0 V

OK**Proceed to next circuit inspection shown on problem symptom table ([See page DI-786](#)).****NG****Check and repair harness or connector between Power Seat Control ECU and battery.**