


## Power window motor circuit on driver door

### CIRCUIT DESCRIPTION

The power window master switch receives the power window switch signal from the master switch to operate the power window motor.

### WIRING DIAGRAM

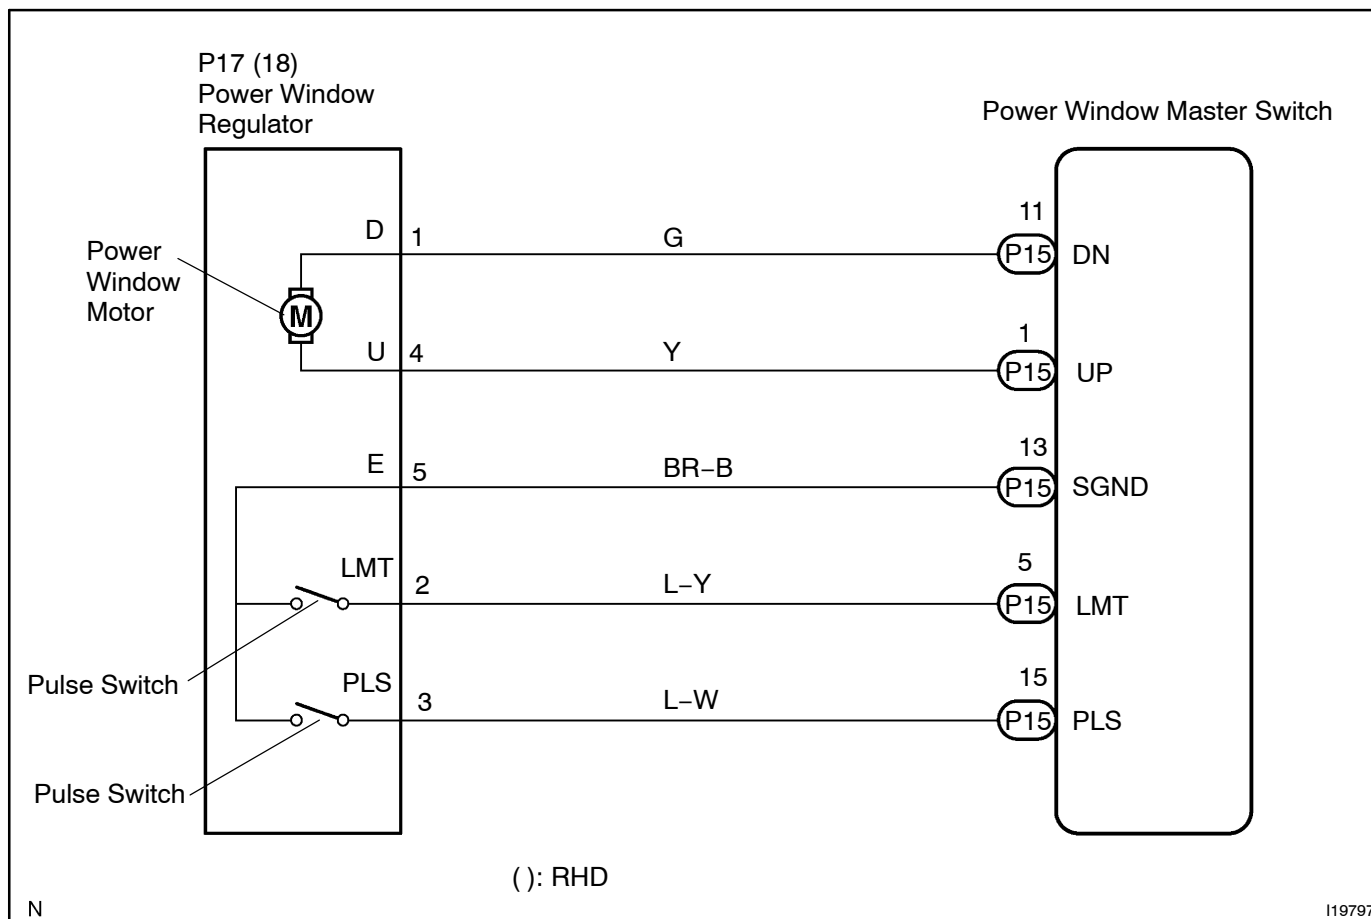

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	<b>Check power window motor using hand-held tester.</b>
---	---------------------------------------------------------

### PREPARATION:

Connect the hand-held tester to DLC 3.

### CHECK:

Check that the power window motor can operate in ACTIVE TEST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).

NG

2	<b>Check power window motor (<a href="#">See page BE-51</a>).</b>
---	-------------------------------------------------------------------

NG

Replace power window motor.

OK

3	<b>Check wire harness and connector between power window motor and power window master switch (<a href="#">See page IN-38</a>).</b>
---	-------------------------------------------------------------------------------------------------------------------------------------

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).