

## 10. Sound of radio, cassette tape or CD only cannot be heard from speaker.

### INSPECTION PROCEDURE

1	Check the radio receiver assembly.
---	------------------------------------

**PREPARATION:**

Disconnect the radio receiver assembly connector.

**CHECK:**

Check voltage terminals +B.

**OK:**

+B: 10 – 14 V

**CHECK:**

Check voltage terminal ACC when turn ignition switch ACC or ON position.

**OK:**

ACC: 10 – 14 V

**CHECK:**

Check continuity terminal GND.

**OK:**

GND: Continuity

NG

Replace or repair wire harness or connector.

OK

Replace the radio receiver assembly.