


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse the curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 2 to 9, refer to [page BO-97](#).

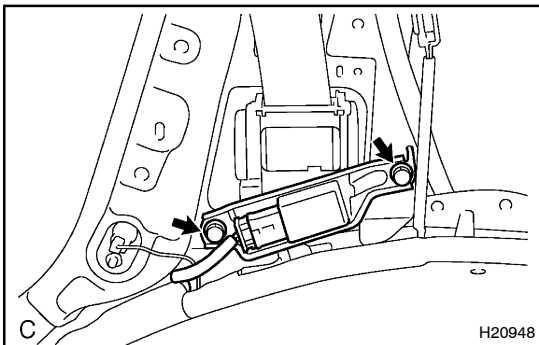

1. INSTALL CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Install the curtain shield airbag sensor assembly with the 2 bolts.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (b) Connect the connector.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure that the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installation, shake the sensor assembly to check that there is no looseness.

2. INSTALL QUARTER TRIM PANEL

3. w/ Rear No. 2 Seat (Forward-Facing Type): INSTALL STRIKER PLATES

4. Forward –Facing Type:

INSTALL REAR NO. 2 SEAT

5. INSTALL REAR MAT SET PLATE

6. INSTALL REAR SEAT BELT ANCHOR

7. INSTALL REAR DOOR OPENING TRIM

8. INSTALL REAR DOOR SCUFF PLATE

9. INSPECT SRS WARNING LIGHT ([See page DI-432](#))