

## RSCA OFF SWITCH INSPECTION


RS0W4-01

### 1. INSPECT RSCA OFF INDICATOR LIGHT

- Turn the ignition switch to ON.
- Check that the RSCA OFF indicator light goes off after it comes on for 3 seconds.
- Check that the RSCA OFF indicator light comes on after pressing the RSCA OFF switch approx. 2 seconds.

### 2. INSPECT RSCA OFF SWITCH CONTINUITY

- Remove the LWR instrument panel finish panel ([See page BO-79](#)).
- Remove the RSCA OFF switch from the LWR instrument panel finish panel.

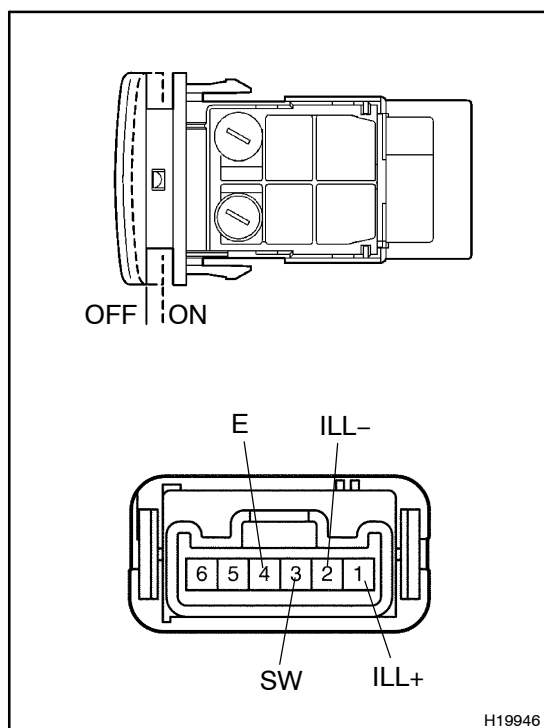

- Inspect the continuity between the each terminals.

Switch position	Tester connection	Specified condition
OFF	SW (3) ↔ E (4)	No continuity
Hold ON	SW (3) ↔ E (4)	Continuity
Illumination	ILL+ (1) ↔ ILL- (2)	Continuity

If continuity is not as specified, replace the RSCA OFF switch or bulb.