


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : 2UZ-FE]

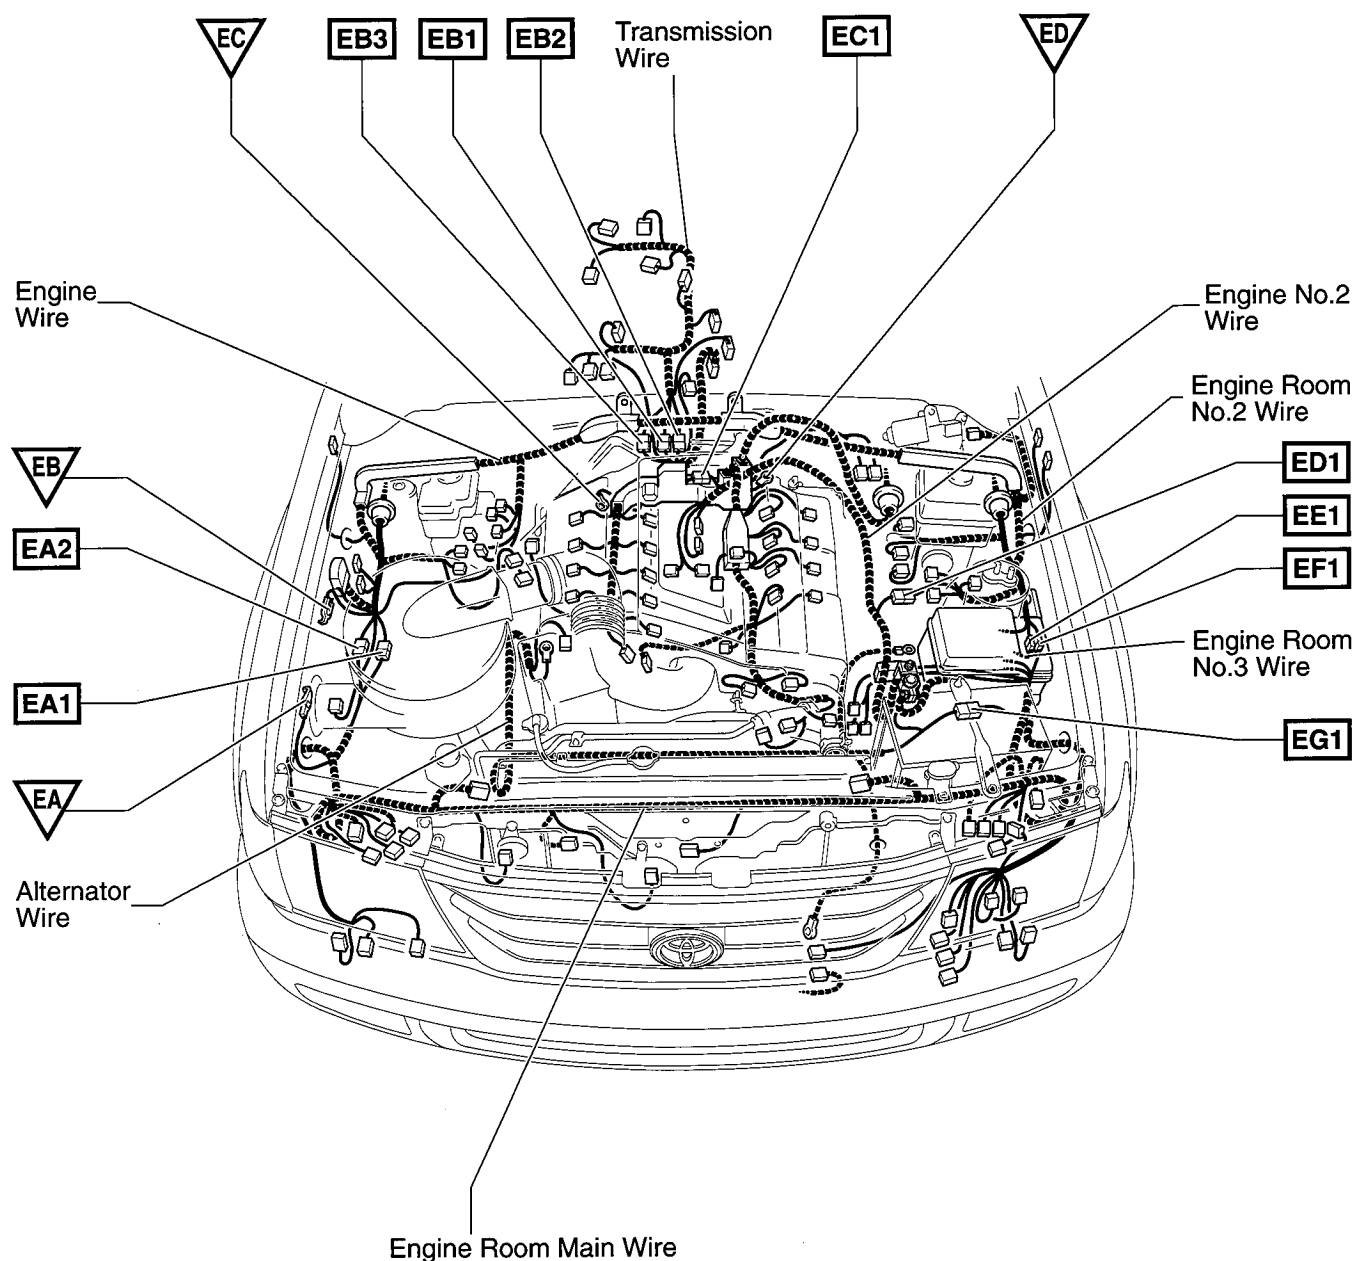

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	
EB2	Engine Wire and Transmission Wire (On the Transmission)
EB3	
EC1	Engine No.2 Wire and Engine Wire (Rear Side of Intake Manifold)
ED1	Engine No.2 Wire and Engine Room No.2 Wire (Near the Engine Room J/B)
EE1	Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B)
EG1	Engine Room Main Wire and Alternator Wire (Near the Battery)