


## Position of Parts in Seat

**[LHD : w/o Seat ECU]**

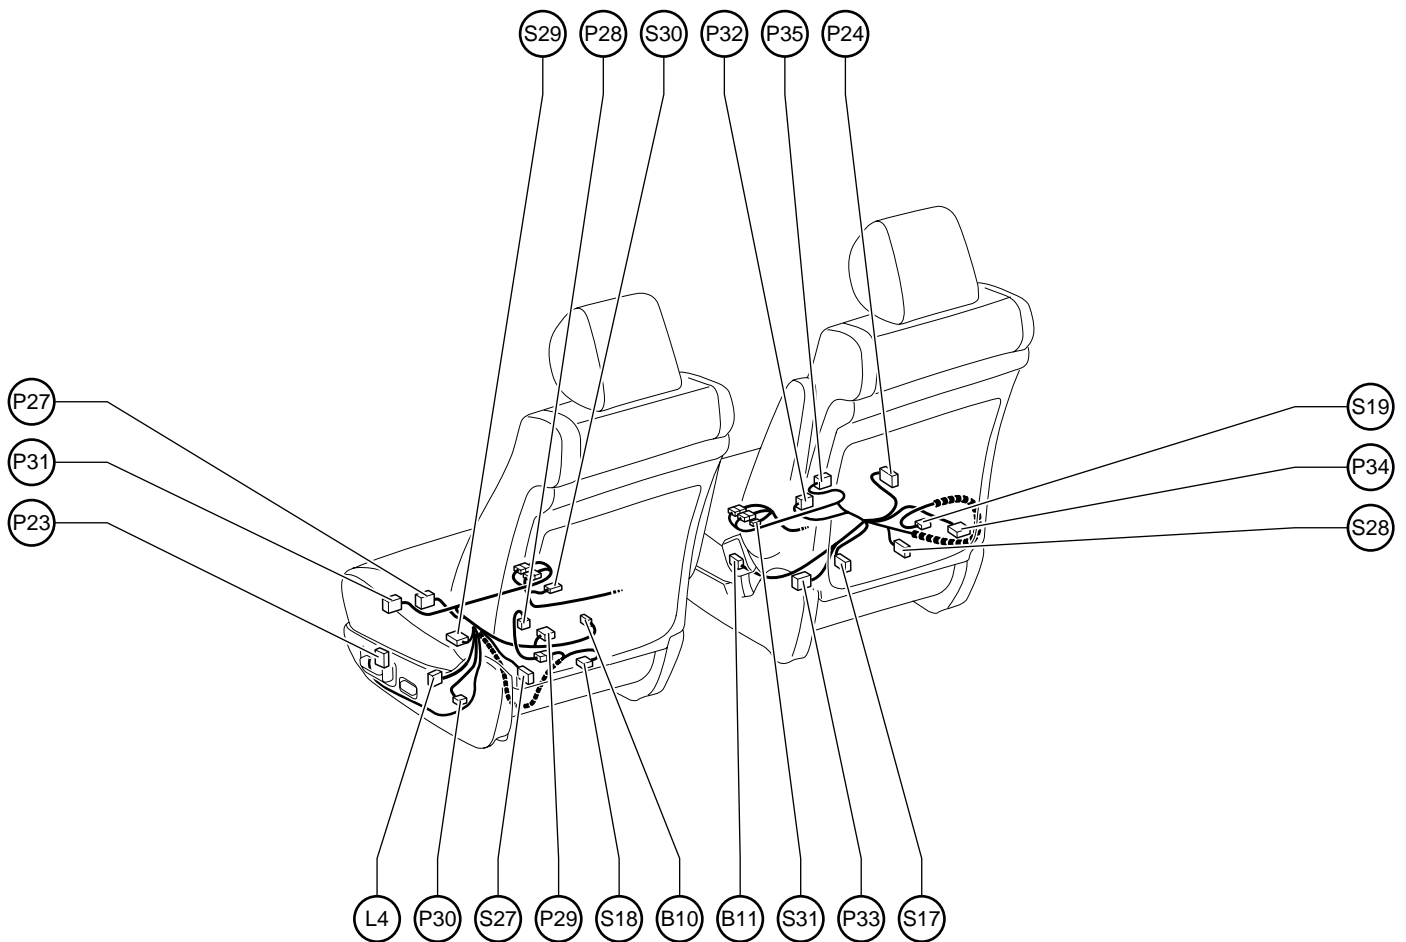

B10 Buckle SW LH  
B11 Buckle SW RH

L 4 Lumbar Support Control SW (Driver's Seat)

P23 Power Seat Control SW (Driver's Seat)  
P24 Power Seat Control SW (Front Passenger's Seat)  
P27 Power Seat Motor (Driver's Seat Front Vertical Control)  
P28 Power Seat Motor  
(Driver's Seat Lumbar Support Control)  
P29 Power Seat Motor (Driver's Seat Rear Vertical Control)  
P30 Power Seat Motor (Driver's Seat Reclining Control)  
P31 Power Seat Motor (Driver's Seat Slide Control)  
P32 Power Seat Motor  
(Front Passenger's Seat Front Vertical Control)  
P33 Power Seat Motor  
(Front Passenger's Seat Rear Vertical Control)  
P34 Power Seat Motor  
(Front Passenger's Seat Reclining Control)  
P35 Power Seat Motor  
(Front Passenger's Seat Slide Control)

S17 Seat Belt Warning Occupant Detection Sensor  
S18 Seat Heater (Driver's Seat)  
S19 Seat Heater (Front Passenger's Seat)  
S27 Seat Heater (Driver's Seat Cushion)  
S28 Seat Heater (Front Passenger's Seat Cushion)  
S29 Seat Position Sensor  
S30 Side Airbag Squib LH  
S31 Side Airbag Squib RH