


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1FZ-FE]

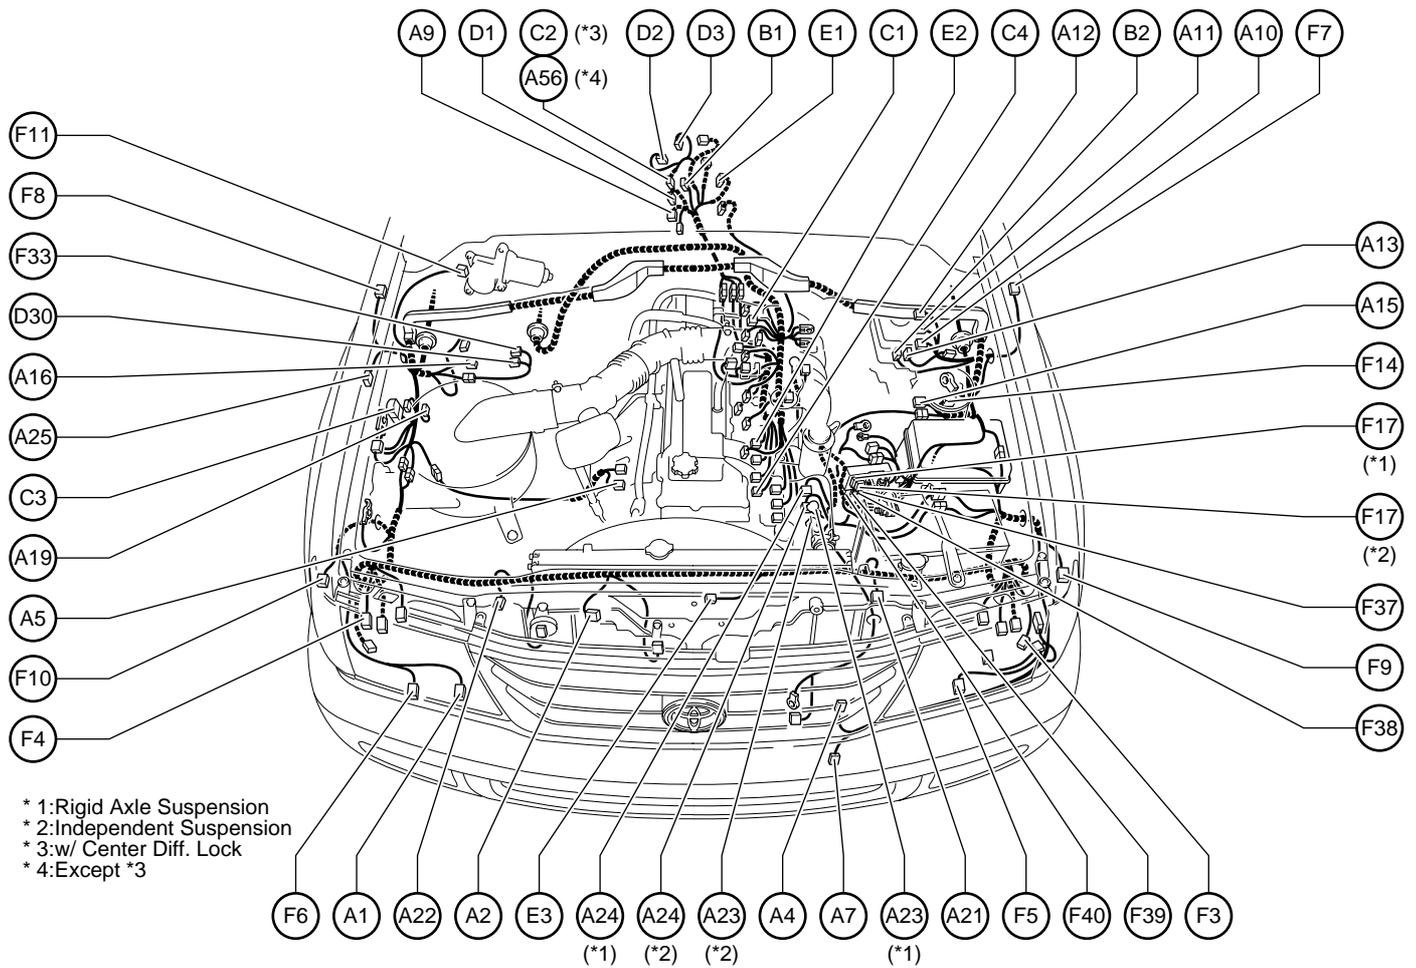

* 1:Rigid Axle Suspension
 * 2:Independent Suspension
 * 3:w/ Center Diff. Lock
 * 4:Except *3

- | | |
|-------------------------------------|--|
| A 1 A/C Ambient Temp. Sensor | D 1 Detection SW (Center Diff. Lock) |
| A 2 A/C Condenser Fan Motor | D 2 Detection SW (Transfer L Position) |
| A 4 Pressure SW | D 3 Detection SW (Transfer Neutral Position) |
| A 5 A/C Magnetic Clutch | D30 Detection SW (Front Diff. Lock) |
| A 7 A/C Magnetic Valve | E 1 ECT Solenoid |
| A 9 A/T Oil Temp. Sensor | E 2 EFI Water Temp. Sensor |
| A10 ABS Actuator | E 3 Engine Hood Courtesy SW |
| A11 ABS Actuator | F 3 Front Clearance Light LH |
| A12 ABS Actuator | F 4 Front Clearance Light RH |
| A13 ABS Actuator | F 5 Front Fog Light LH |
| A15 ABS Speed Sensor Front LH | F 6 Front Fog Light RH |
| A16 ABS Speed Sensor Front RH | F 7 Front Side Turn Signal Light LH |
| A19 Air Cleaner Warning Sensor | F 8 Front Side Turn Signal Light RH |
| A21 Airbag Sensor Front LH | F 9 Front Turn Signal Light LH |
| A22 Airbag Sensor Front RH | F10 Front Turn Signal Light RH |
| A23 Alternator | F11 Front Wiper Motor |
| A24 Alternator | F14 Fuel Pump Resistor |
| A25 Auto Antenna Motor | F17 Fusible Link Block |
| A56 ADD Control Motor | F33 Front Diff. Lock Motor |
| B 1 Back-Up Light SW | F37 Fusible Link Block |
| B 2 Brake Fluid Level Warning SW | F38 Fusible Link Block |
| C 1 Camshaft Position Sensor | F39 Fusible Link Block |
| C 2 Center Diff. Lock Control Motor | F40 Fusible Link Block |
| C 3 Check Connector | |
| C 4 Crankshaft Position Sensor | |