


E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

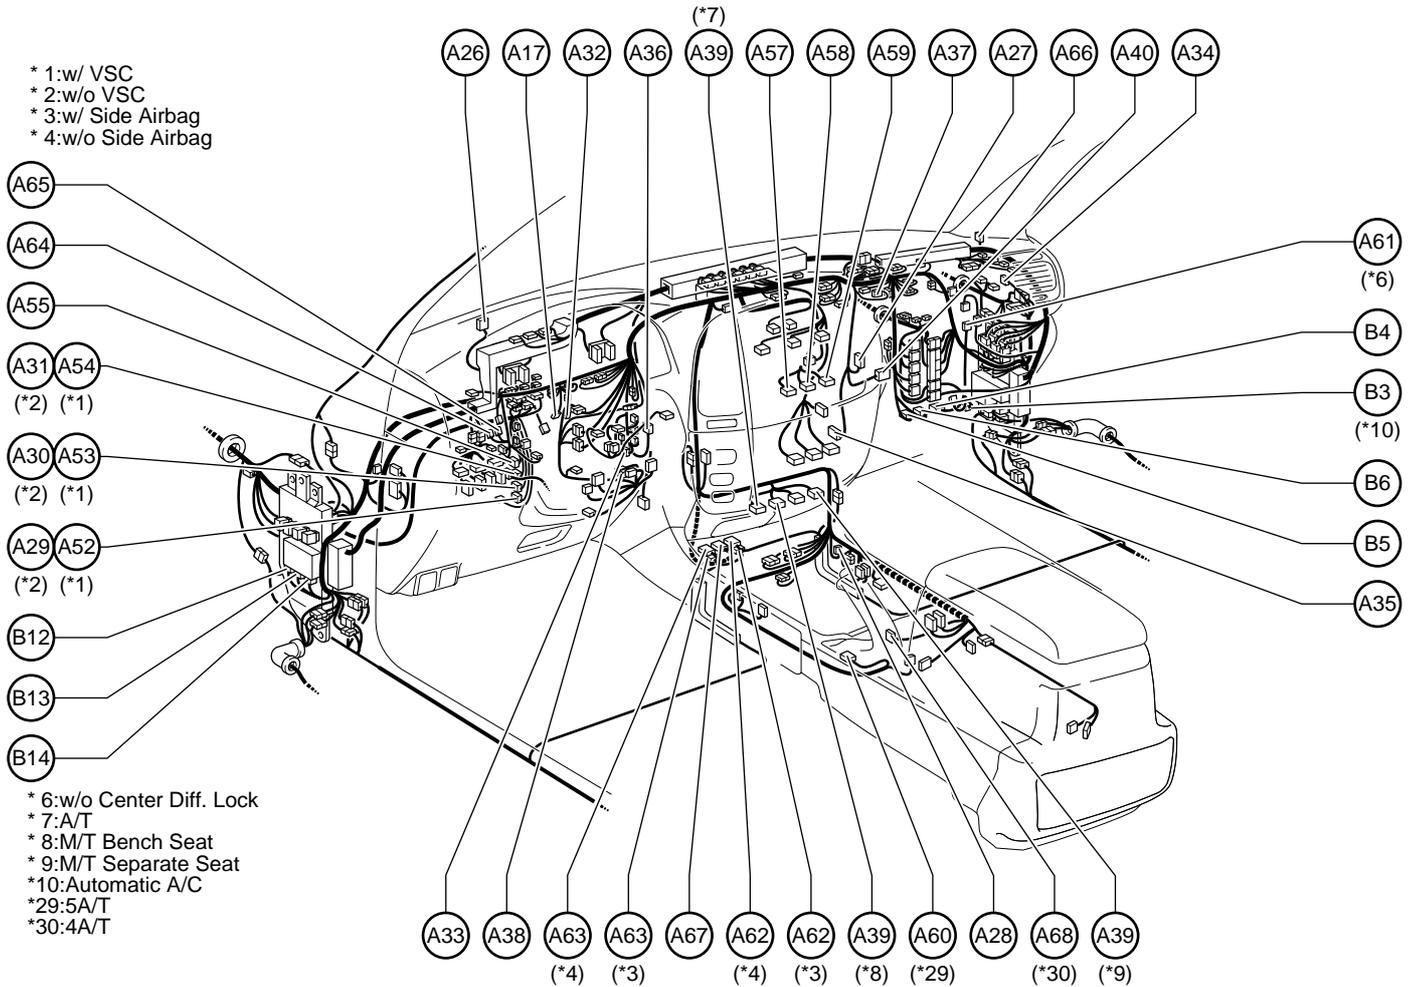

- A 17 Accel Position Sensor
- A 26 A/C Solar Sensor
- A 27 A/C Thermistor
- A 28 ABS Deceleration Sensor
- A 29 ABS ECU
- A 30 ABS ECU
- A 31 ABS ECU
- A 32 Accelerator Pedal SW
- A 33 AHC Main Relay
- A 34 Air Inlet Control Servo Motor
- A 35 Air Mix Control Servo Motor
- A 36 Air Vent Mode Control Servo Motor
- A 37 Airbag Squib (Front Passenger Airbag Assembly)
- A 38 Airbag Squib (Steering Wheel Pad)
- A 39 Ashtray Illumination
- A 40 Auto Antenna Control Relay
- A 52 ABS & BA & TRC & VSC ECU
- A 53 ABS & BA & TRC & VSC ECU
- A 54 ABS & BA & TRC & VSC ECU
- A 55 ABS & BA & TRC & VSC ECU
- A 57 A/C Control Assembly
- A 58 A/C Control Assembly

- A 59 A/C Control Assembly
- A 60 A/T Shift Lever Illumination
Shift Lock Control ECU
- A 61 ADD Control Relay
- A 62 Airbag Sensor Assembly
- A 63 Airbag Sensor Assembly
- A 64 Auto Wiper ECU
Short Connector
- A 65 Auto Wiper ECU
- A 66 Automatic Light Control Sensor
- A 67 Airbag Sensor Assembly
- A 68 A/T Shift Lever Illumination
O/D Main SW
Shift Lock Control ECU
- B 3 Blower Motor Controller
- B 4 Blower HI Relay
- B 5 Blower LO Relay
- B 6 Blower ME Relay
- B 12 Body ECU
- B 13 Body ECU
- B 14 Body ECU