


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1FZ-FE]

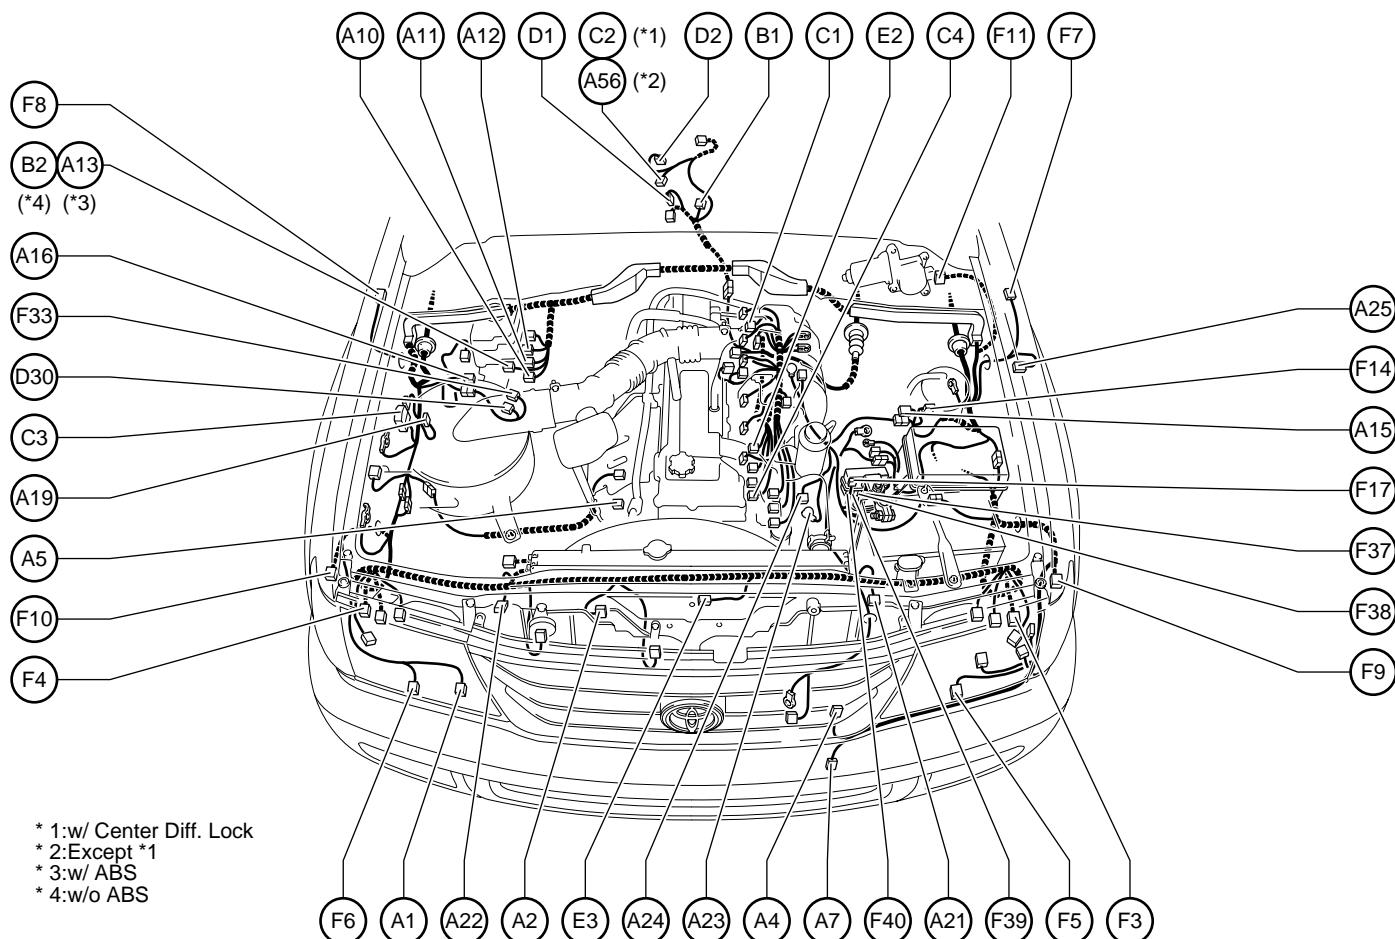

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 4 Pressure SW
 A 5 A/C Magnetic Clutch
 A 7 A/C Magnetic Valve
 A10 ABS Actuator
 A11 ABS Actuator
 A12 ABS Actuator
 A13 ABS Actuator
 A15 ABS Speed Sensor Front LH
 A16 ABS Speed Sensor Front RH
 A19 Air Cleaner Warning Sensor
 A21 Airbag Sensor Front LH
 A22 Airbag Sensor Front RH
 A23 Alternator
 A24 Alternator
 A25 Auto Antenna Motor
 A56 ADD Control Motor

B 1 Back-Up Light SW
 B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 2 Center Diff. Lock Control Motor
 C 3 Check Connector
 C 4 Crankshaft Position Sensor

D 1 Detection SW (Center Diff. Lock)
 D 2 Detection SW (Transfer L Position)
 D30 Detection SW (Front Diff. Lock)
 E 2 EFI Water Temp. Sensor
 E 3 Engine Hood Courtesy SW
 F 3 Front Clearance Light LH
 F 4 Front Clearance Light RH
 F 5 Front Fog Light LH
 F 6 Front Fog Light RH
 F 7 Front Side Turn Signal Light LH
 F 8 Front Side Turn Signal Light RH
 F 9 Front Turn Signal Light LH
 F 10 Front Turn Signal Light RH
 F 11 Front Wiper Motor
 F 14 Fuel Pump Resistor
 F 17 Fusible Link Block
 F 33 Front Diff. Lock Motor
 F 37 Fusible Link Block
 F 38 Fusible Link Block
 F 39 Fusible Link Block
 F 40 Fusible Link Block