


E ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

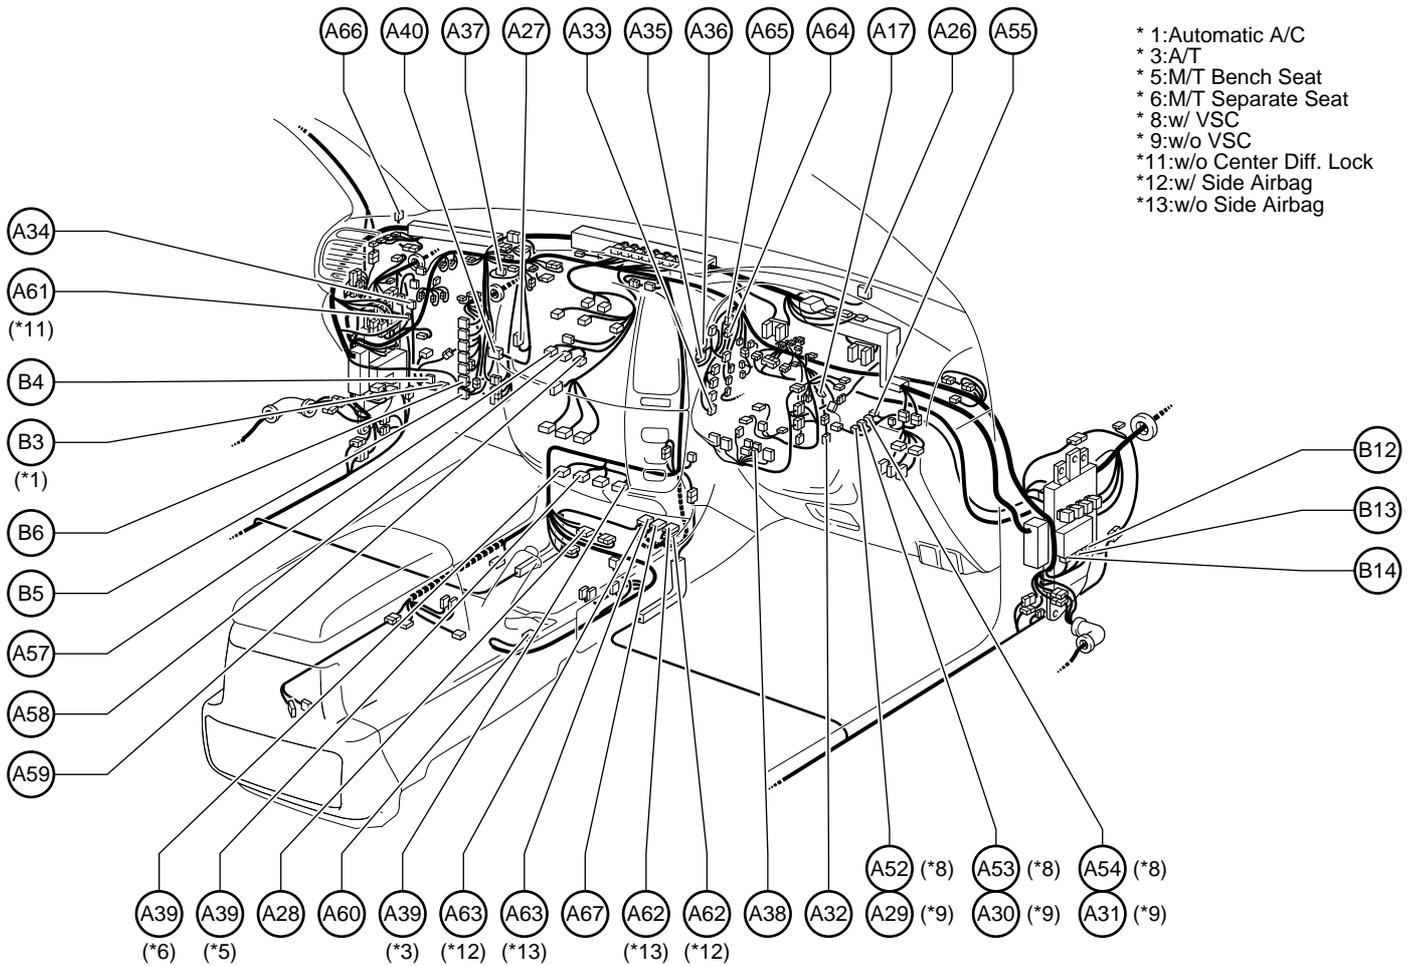

- * 1: Automatic A/C
- * 3: A/T
- * 5: M/T Bench Seat
- * 6: M/T Separate Seat
- * 8: w/ VSC
- * 9: w/o VSC
- * 11: w/o Center Diff. Lock
- * 12: w/ Side Airbag
- * 13: w/o Side Airbag

- | | |
|---|-------------------------------------|
| A 17 Accel Position Sensor | A 58 A/C Control Assembly |
| A 26 A/C Solar Sensor | A 59 A/C Control Assembly |
| A 27 A/C Thermistor | A 60 A/T Shift Lever Illumination |
| A 28 ABS Deceleration Sensor | Shift Lock Control ECU |
| A 29 ABS ECU | A 61 ADD Control Relay |
| A 30 ABS ECU | A 62 Airbag Sensor Assembly |
| A 31 ABS ECU | A 63 Airbag Sensor Assembly |
| A 32 Accelerator Pedal SW | A 64 Auto Wiper ECU |
| A 33 AHC Main Relay | Short Connector |
| A 34 Air Inlet Control Servo Motor | A 65 Auto Wiper ECU |
| A 35 Air Mix Control Servo Motor | A 66 Automatic Light Control Sensor |
| A 36 Air Vent Mode Control Servo Motor | A 67 Airbag Sensor Assembly |
| A 37 Airbag Squib (Front Passenger Airbag Assembly) | |
| A 38 Airbag Squib (Steering Wheel Pad) | B 3 Blower Motor Controller |
| A 39 Ashtray Illumination | B 4 Blower HI Relay |
| A 40 Auto Antenna Control Relay | B 5 Blower LO Relay |
| A 52 ABS & BA & TRC & VSC ECU | B 6 Blower ME Relay |
| A 53 ABS & BA & TRC & VSC ECU | B 12 Body ECU |
| A 54 ABS & BA & TRC & VSC ECU | B 13 Body ECU |
| A 55 ABS & BA & TRC & VSC ECU | B 14 Body ECU |
| A 57 A/C Control Assembly | |