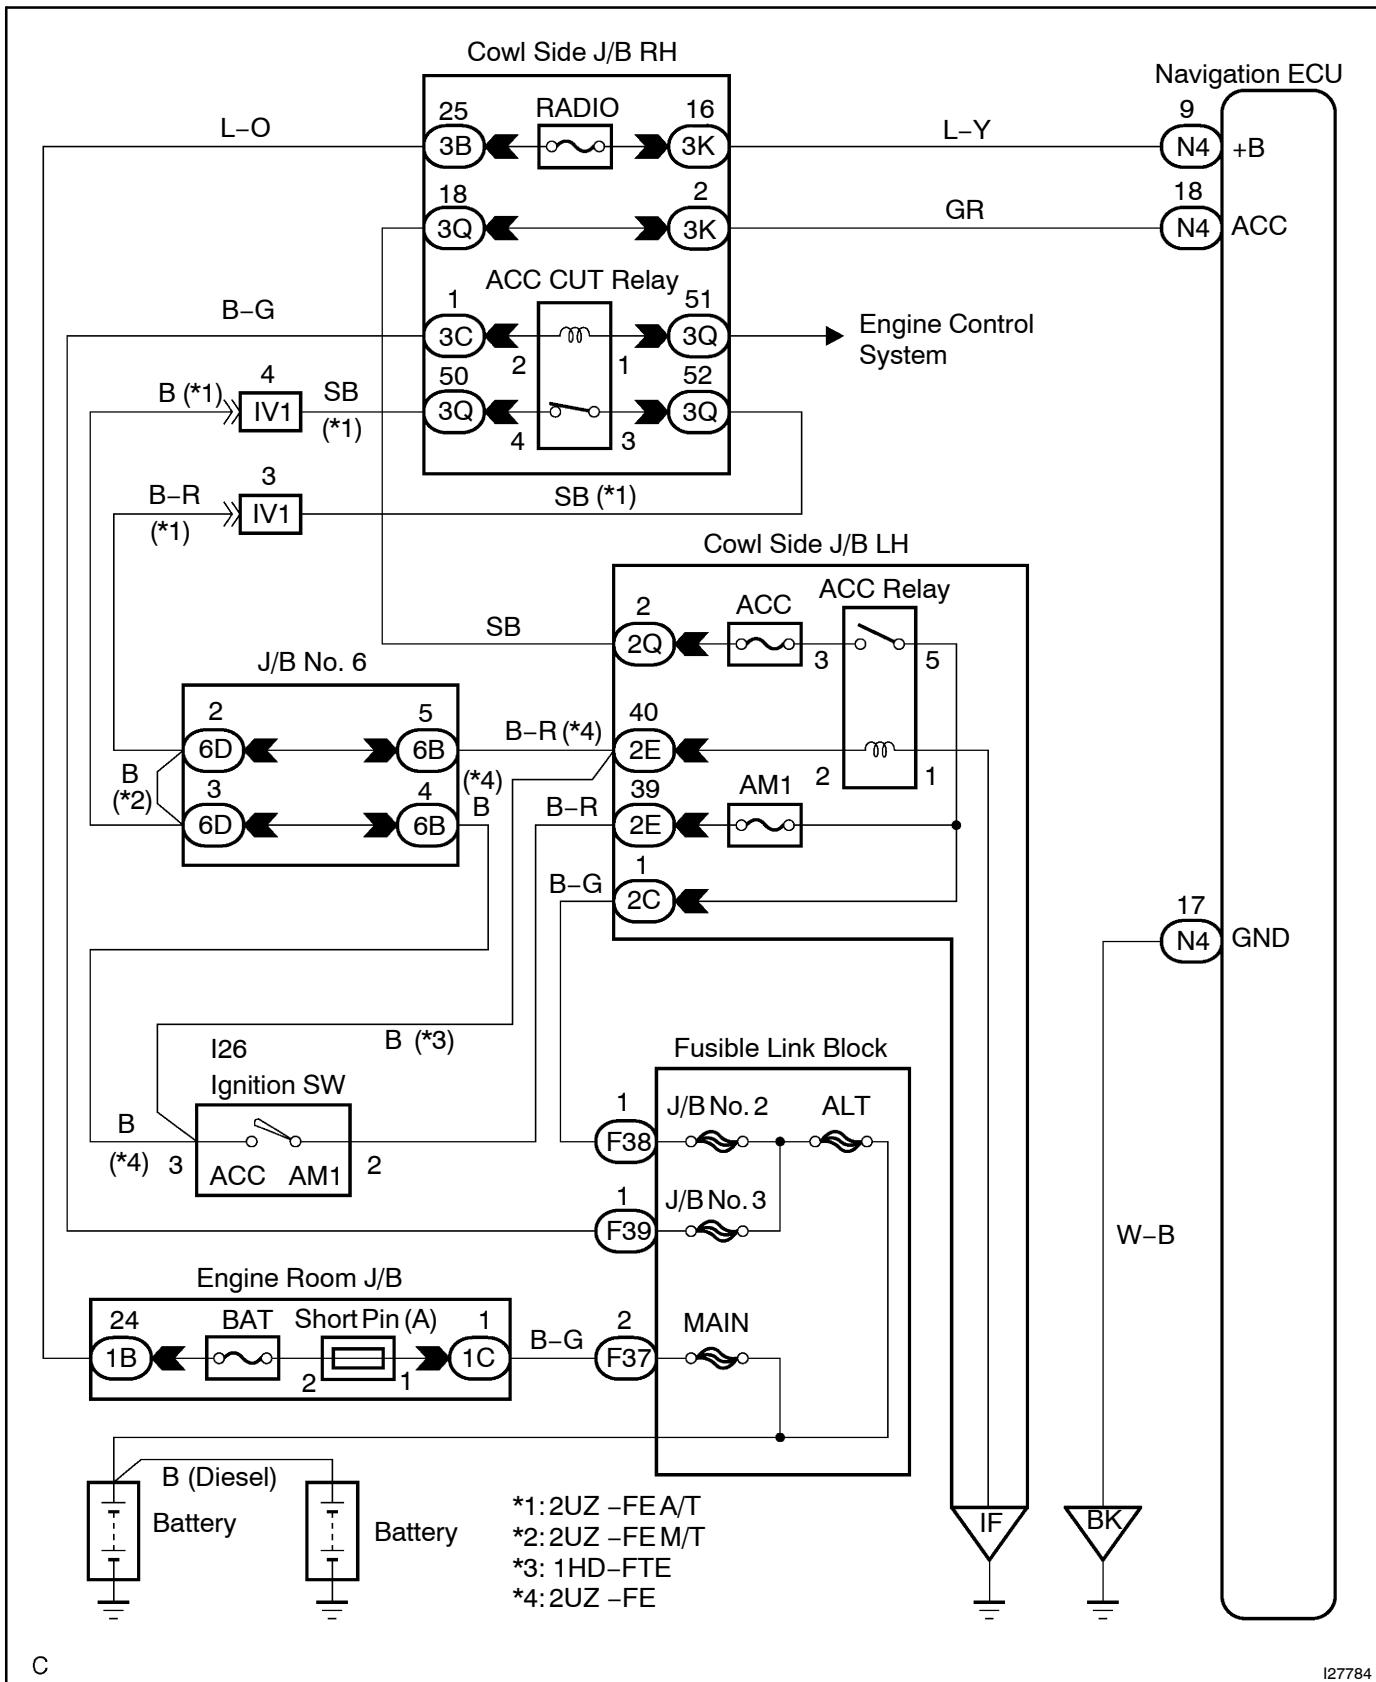


Power Source Circuit (Navigation ECU)

CIRCUIT DESCRIPTION

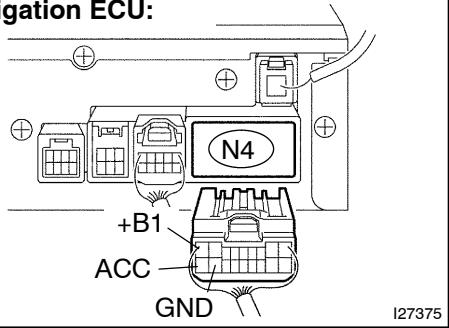
This circuit is the power source circuit to operate the navigation ECU.

WIRING DIAGRAM



INSPECTION PROCEDURE

1 Check voltage between terminals +B1, ACC and GND of navigation ECU.

Navigation ECU:


- (a) Disconnect the connector from the navigation ECU.
 (b) Measure the voltage according to the value(s) in the table below.

Standard:

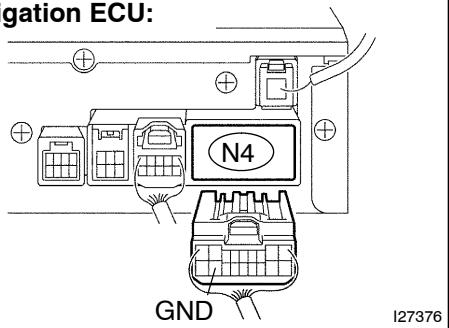
Tester connection	Condition	Specified condition
+B1 – GND	Always	10 to 14 V
ACC – GND	Ignition SW ACC	10 to 14 V

OK

Proceed to next circuit inspection shown in problem symptoms table. (See page DI-209)

NG

2 Check continuity between terminal GND of navigation ECU and body ground.

Navigation ECU:


- (a) Disconnect the connector from the navigation ECU.
 (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND – Body ground	Always	Below 1 Ω

OK

Repair or replace harness or connector between navigation ECU and fuse.

NG

Repair or replace harness or connector between navigation ECU and body ground.