


LHD:

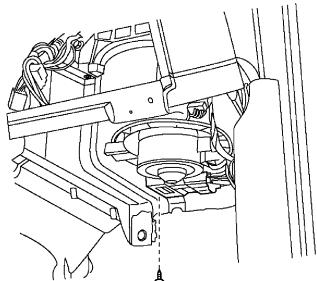

I06740


BLOWER MOTOR CONTROL RELAY (Auto A/C) INSPECTION

AC1TL-01


1. REMOVE BLOWER MOTOR CONTROL RELAY

- Disconnect the connector.
- Remove the screw and relay.

RHD:

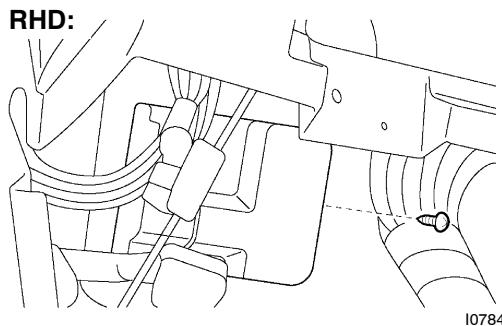

I07843

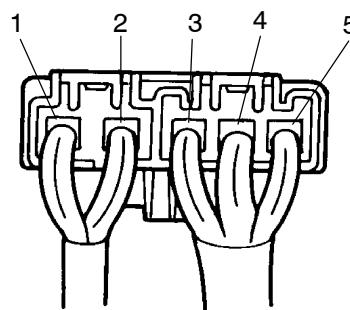

N17641

2. INSPECT BLOWER MOTOR CONTROL RELAY

Connect the connector to relay and inspect wire harness side connector from the back side, as shown in the chart below.

Test condition

- Turn ignition switch to ON

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
2 – Ground	Blower speed control switch at "LO" position	Approx. 3.5V
	Blower speed control switch at "M1" position	Approx. 2.2V
	Blower speed control switch at "HI" position	No voltage
3 – Ground	Operate blower motor	Battery voltage
	Blower speed control switch at "OFF"	No voltage
4 – 5	Blower speed control switch at "LO" position	Approx. 3.6V
	Blower speed control switch at "M2" position	Approx. 8.3V
	Blower speed control switch at "HI" position	Approx. 13.0V

If the circuit is not as specified, replace the relay.