


HEATER MAIN RELAY INSPECTION

AC1TY-01


1. REMOVE THESE PARTS:

- (a) Front door scuff plate RH
- (b) Cowl side trim RH

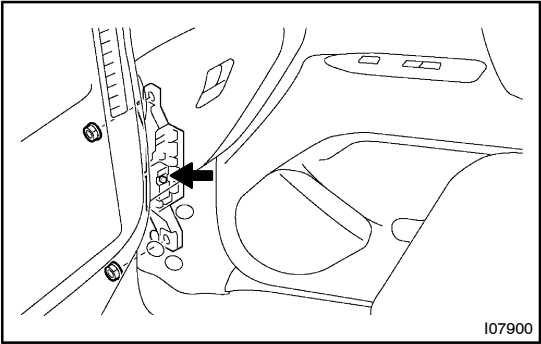


2. REMOVE HEATER MAIN RELAY

- (a) Disconnect the connectors.
- (b) Remove the 2 No. 3 junction block set nuts.
- (c) Loosen the connector set bolt.
- (d) Remove the 2 No. 3 junction block set nuts.

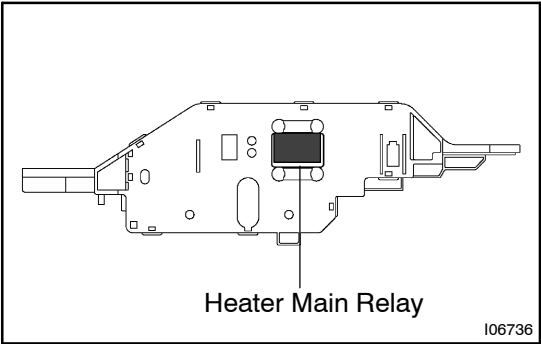

- (e) Remove the heater main relay from junction block.

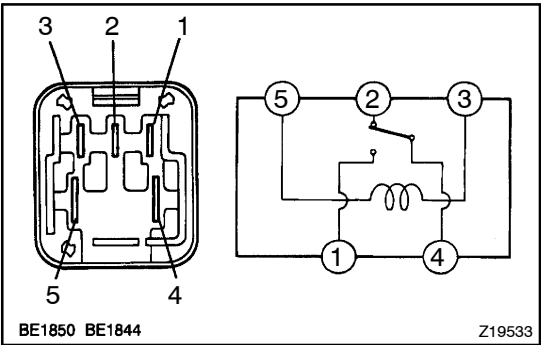

3. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 5	Continuity
Apply B+ between terminals 3 and 5.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

4. INSTALL HEATER MAIN RELAY TO NO. 3 JUNCTION BLOCK

5. INSTALL 2 NO. 3 JUNCTION BLOCK SET NUTS

6. INSTALL THESE PARTS:

- (a) Cowl side trim RH
- (b) Front door scuff plate RH