


# REAR HEATER RELAY INSPECTION


## 1. REMOVE THESE PARTS:

- (a) Front door scuff plate LH
- (b) Cowl side trim LH

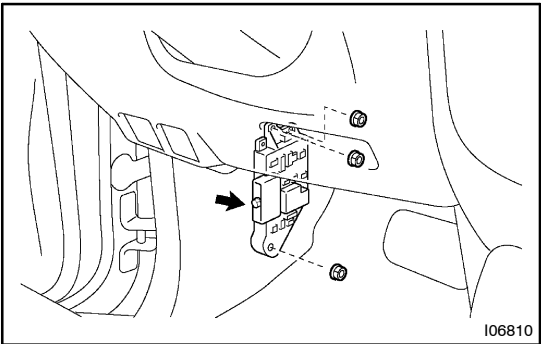


## 2. REMOVE REAR HEATER RELAY

- (a) Disconnect the connectors.
- (b) Remove the 3 No. 2 junction block set nuts.
- (c) Loosen the connector set bolt.
- (d) Pull out the junction block.

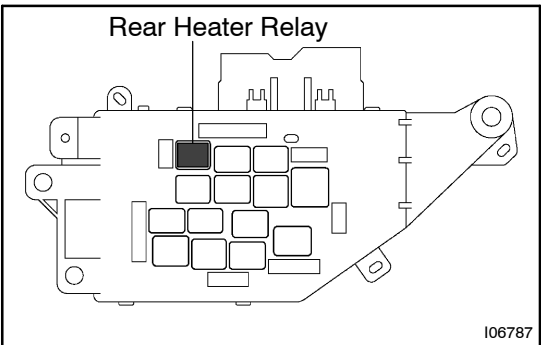

- (e) Remove the relay.

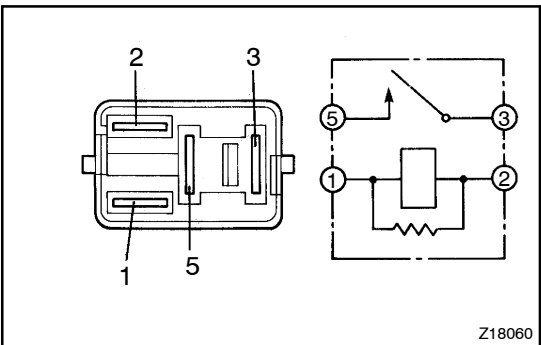

## 3. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

## 4. INSTALL RELAY

## 5. INSTALL 3 NO. 2 JUNCTION BLOCK SET NUTS

## 6. INSTALL THESE PARTS:

- (a) Cowl side trim LH
- (b) Front door scuff plate LH