



# COOL BOX RELAY INSPECTION

AC1U2-01

1. REMOVE REAR CONSOLE BOX  
(See page BO-127)

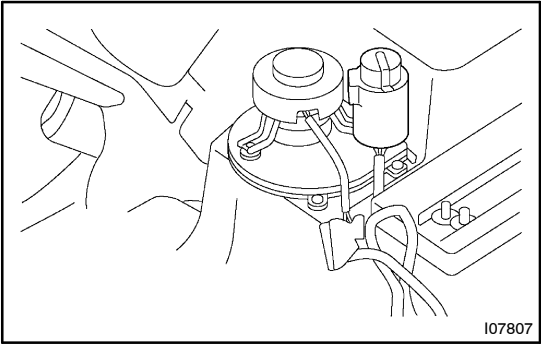

2. REMOVE RELAY  
(a) Disconnect the connector.  
(b) Pry out the tape and remove the relay.

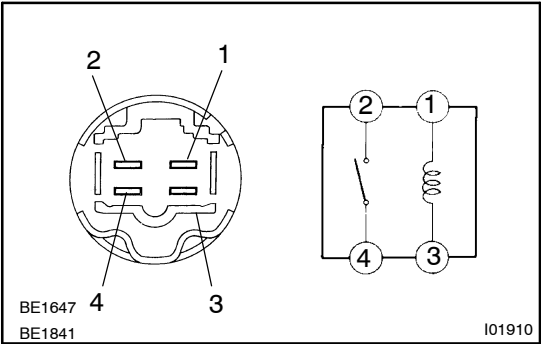

3. INSPECT COOL BOX RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 3	Continuity
Apply B+ between terminals 1 and 3.	2 – 4	Continuity

If continuity is not as specified, replace the relay.

4. INSTALL RELAY  
5. INSTALL REAR CONSOLE BOX