

## REPLACEMENT


### 1. Auto Antenna Models:

#### REMOVE ANTENNA ROD

##### HINT:

Do this operation with the battery negative ( - ) cable connected to the battery terminal.

- (a) Remove the antenna nut.
- (b) Radio switch to "ON" position.
- (c) Antenna switch to "UP". ( 1/2 or more for antenna rod)

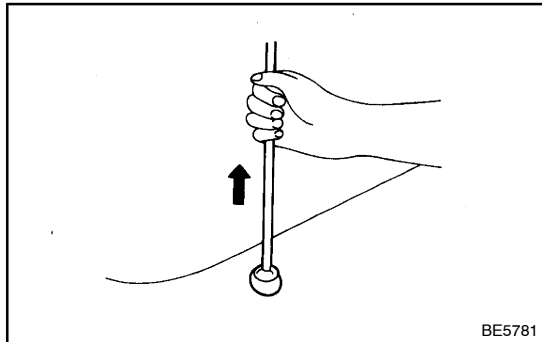


- (d) Antenna rod catch to hand and radio switch "OFF".
- (e) Try again radio switch "ON" and antenna switch "UP".
- (f) Remove antenna rod.

##### HINT:

The rod will extend fully and be released from the motor antenna.

##### NOTICE:

**To prevent body damage when the antenna rod is released, hold the rod while it comes out.**

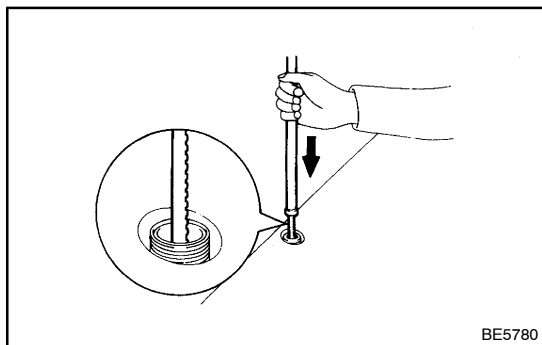

### 2. Auto Antenna Models:

#### INSTALL ANTENNA ROD

- (a) Insert the cable of the rod until it reaches the bottom.

##### HINT:

- When inserting the cable, the teeth on the cable must face toward the rear of the vehicle.
- Insert the antenna approx. 350 mm.

- (b) Radio switch to "OFF".

##### HINT:

- In case the cable is not wound, twist it, as shown in the illustration.
- Even if the rod has not retracted fully, install the antenna nut and inspect the antenna rod operation. It will finally retract fully.

- (c) Inspect the antenna rod operation by pushing the radio wave band select buttons.

