


## DISASSEMBLY

### 1. REMOVE LOWER FRAME BRACKET


Using a screwdriver, remove the lower frame bracket garnish.

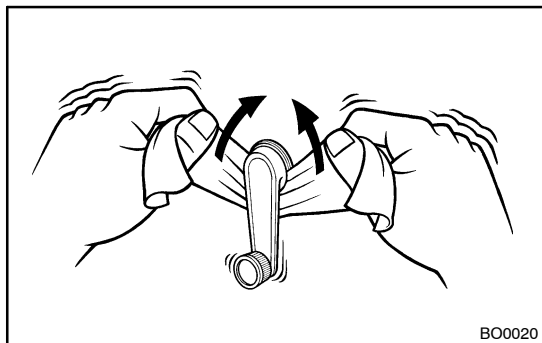

### 2. w/o Power Window:


#### REMOVE REGULATOR HANDLE

Pull off the snap ring with a shop rag and remove the regulator handle and plate.

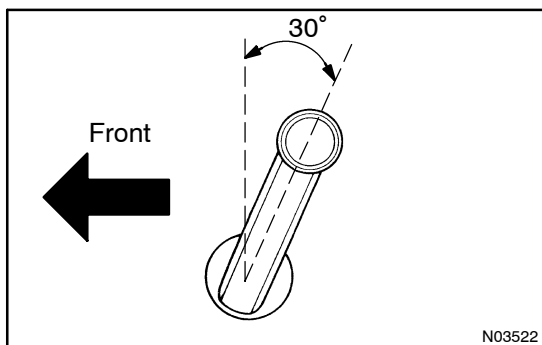

#### HINT:

At the time of assembly, please refer to the following item.  
With door window fully closed, install the plate and regulator handle with the snap ring shown in the illustration.

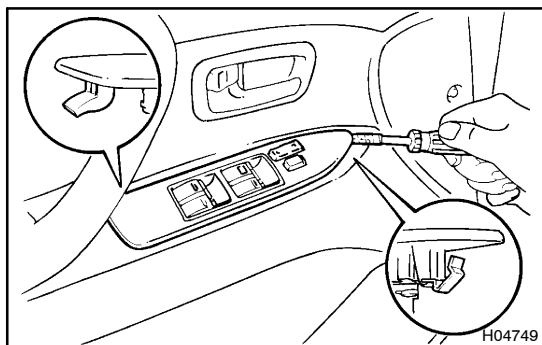


### 3. w/ Power Window:

#### REMOVE REGULATOR HANDLE

- Using a screwdriver, remove the power window switch as shown in the illustration.

#### HINT:

- Tape the screwdriver tip before use.
- Disconnect the connector.

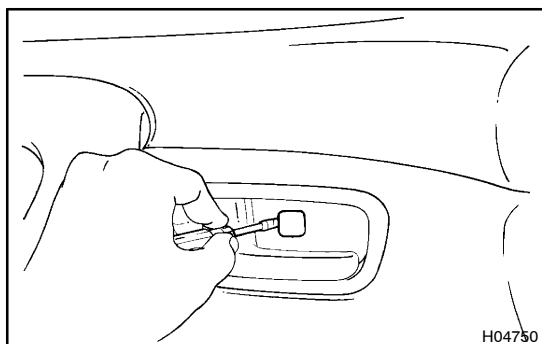


### 4. REMOVE DOOR INSIDE HANDLE BEZEL

- Using a screwdriver, open the cover as shown in the illustration.

#### HINT:


Tape the screwdriver tip before use.

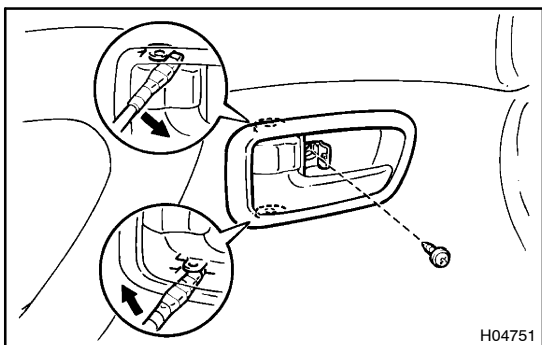

- (b) Remove the screw.
- (c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

**HINT:**

Tape the screwdriver tip before use.

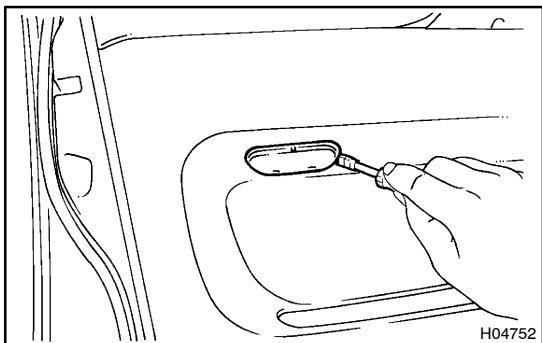


### 5. w/ Courtesy Light:

#### REMOVE DOOR COURTESY LIGHT

Using a screwdriver, remove the courtesy light, then disconnect the connector.

**HINT:**

Tape the screwdriver tip before use.

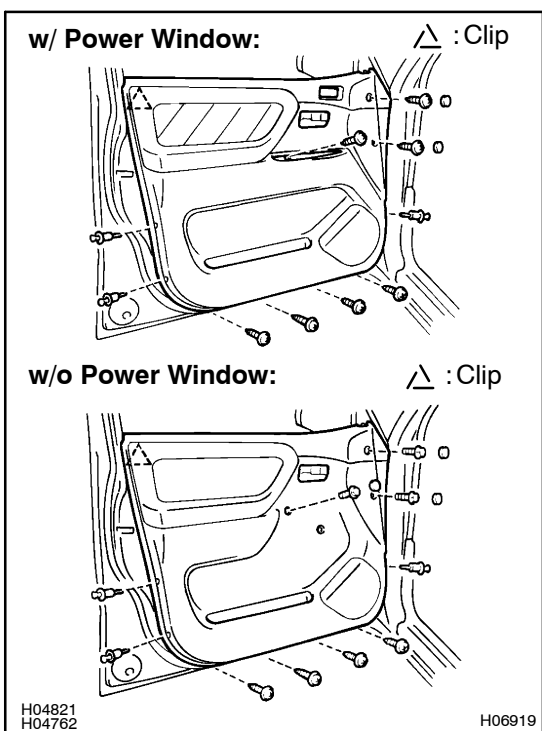

### 6. REMOVE DOOR TRIM

- (a) w/ Power Window:  
Remove the 2 caps and 7 screws.
- (b) w/o Power Window:  
Remove the 3 caps and 7 screws.
- (c) Remove the 3 clips.
- (d) Insert a screwdriver between the door and door trim to pry the trim out.


**NOTICE:**

**Be careful not to damage the door and door trim.**

**HINT:**

Tape the screwdriver tip before use.

- (e) Pull the trim upward to remove it.

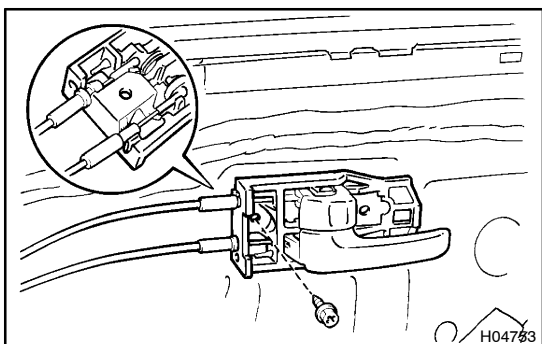

### 7. REMOVE INSIDE HANDLE

- (a) Remove the screw.
- (b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

### 8. REMOVE SERVICE HOLE COVER

Remove the service hole cover.

**NOTICE:**


**Do not tear the cover.**

**HINT:**

At the time of assembly, please refer to the following item.  
Bring out the 2 control cables through the service hole cover.

**9. REMOVE OUTER REAR VIEW MIRROR**

- (a) w/ Power Remote Control Mirror:  
Disconnect the connector.
- (b) Remove the 3 bolts and mirror.

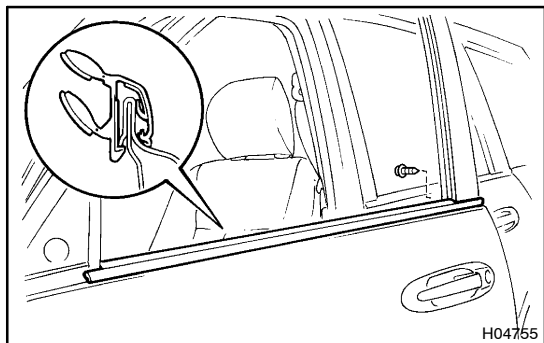**10. REMOVE DOOR BELT MOULDING**


- (a) Remove the screw.
- (b) Using a scraper, remove the door belt moulding.

**HINT:**



Tape the screwdriver tip before use.

**11. REMOVE THESE PARTS:**

- (a) Door glass
- (b) w/ Speaker:  
Speaker
- (c) w/o Speaker:  
Speaker Hole Cover
- (d) Door glass run
- (e) Lower frame

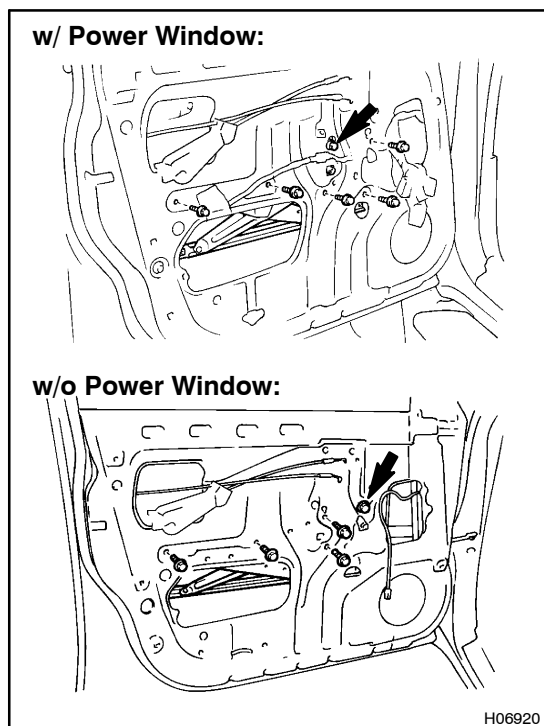**12. REMOVE WINDOW REGULATOR**

- (a) w/ Power Window:  
Disconnect the connector, then remove the 5 bolts.  
**Torque: 5.0 N·m (5 1 kgf·cm, 44 in.·lbf)**
- (b) w/o Power Window:  
Remove the 4 bolts.  
**Torque: 5.0 N·m (5 1 kgf·cm, 44 in.·lbf)**
- (c) Loosen the bolt and window regulator.  
**Torque: 5.0 N·m (5 1 kgf·cm, 44 in.·lbf)**

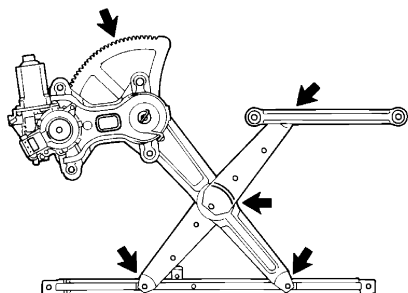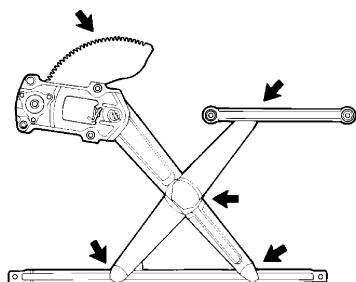**w/ Power Window:****w/o Power Window:**H04758  
H04764

H06921

**HINT:**

Remove the regulator through the service hole.

**HINT:**



At the time of assembly, please refer to the following item.

Apply MP grease to the window regulator.

**NOTICE:**

At the time of assembly, please refer to the following item.

Do not apply grease to the spring of the window regulator.

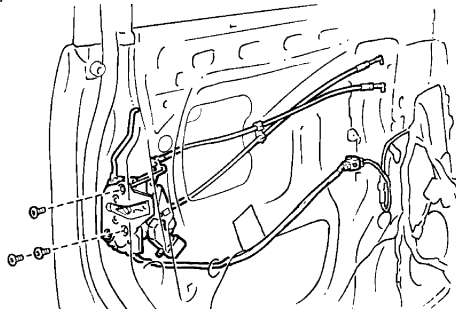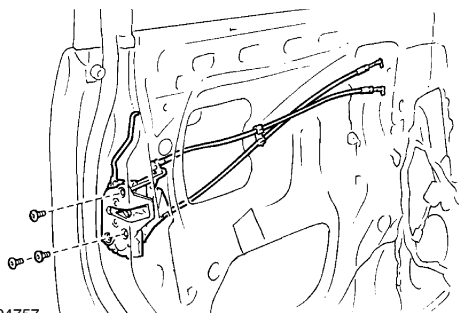**w/ Power Door Lock:****w/o Power Door Lock:**H04757  
H05717

H06922

**13. REMOVE DOOR LOCK**

- (a) Remove the clip and door lock link protector.
- (b) w/ Power Door Lock:  
Disconnect the connector.
- (c) Disconnect the 2 links from outside handle and door lock cylinder.
- (d) Using a torx wrench, remove the 3 screws and door lock.

**Torx wrench: T30 (Part No.09042 -00010 or locally manufactured tool)**

**Torque: 5.0 N·m (5 1 kgf·cm, 44 in·lbf)**

**HINT:**

Remove the door lock through the service hole.


**HINT:**

At the time of assembly, please refer to the following items.


- Apply adhesive to 3 screws.

**Part No.08833 -00070, THREE BOND 1324 or equivalent**

w/ Power Door Lock:

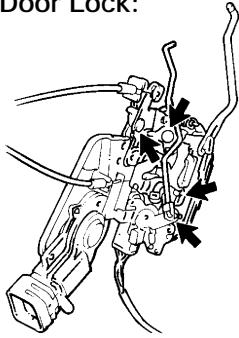

w/o Power Door Lock:

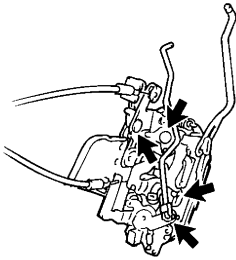

H04759  
H05718

H06923

- S Apply MP grease to the sliding and rotating parts of the door lock.
14. **REMOVE OUTSIDE HANDLE WITH DOOR LOCK CYLINDER**
- (a) Remove the 2 bolts and outside handle with door lock cylinder.
  - (b) Remove the bolt and door lock cylinder from the outside handle.