


DISASSEMBLY

1. REMOVE DOOR INSIDE HANDLE BEZEL

- (a) Using a screwdriver, open the cover as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

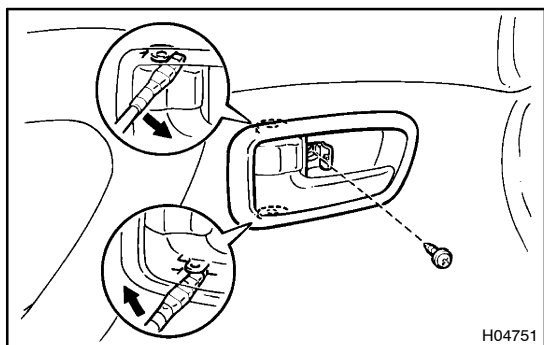


- (b) Remove the screw.

- (c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

HINT:


Tape the screwdriver tip before use.

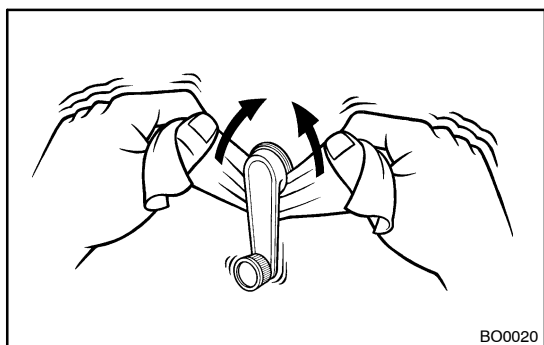

2. w/o Power Window:

REMOVE REGULATOR HANDLE

Pull off the snap ring with a shop rag and remove the regulator handle and plate.

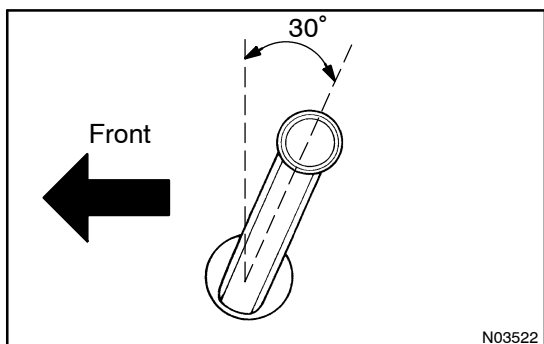

HINT:

At the time of assembly, please refer to the following item.

With door window fully closed, install the plate and regulator handle with the snap ring shown in the illustration.



3. w/ Power Window:


REMOVE POWER WINDOW SWITCH

- (a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

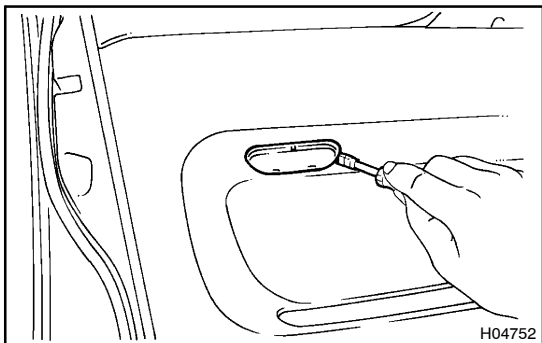


4. w/ Door Courtesy Light:

REMOVE DOOR COURTESY LIGHT

Using a screwdriver, remove the courtesy light, then disconnect the connector.


HINT:

Tape the screwdriver tip before use.

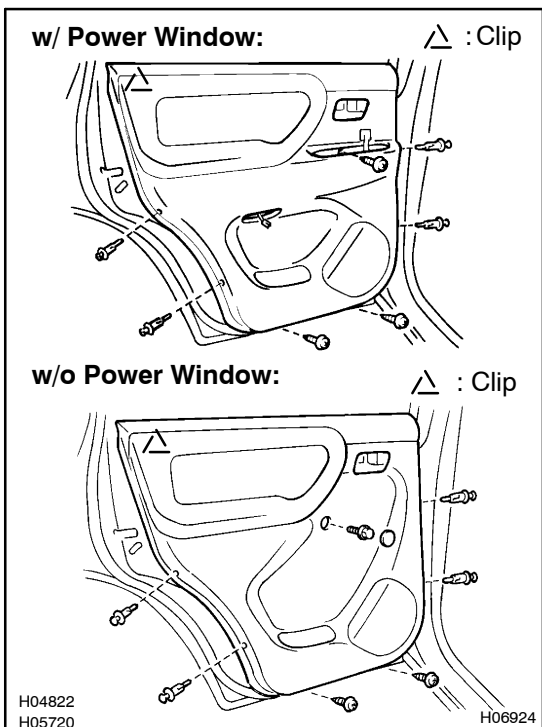

5. REMOVE DOOR TRIM

- (a) w/ Power Window:
Remove the 3 screws.
- (b) w/o Power Window:
Remove the cap and 3 screws.
- (c) Remove the 4 clips.
- (d) Pull the trim upward to remove it.

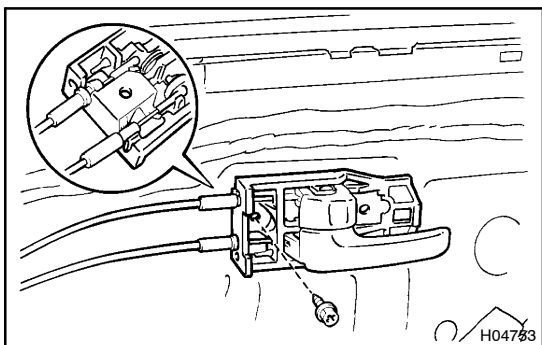

6. REMOVE INSIDE HANDLE


- (a) Remove the screw.
- (b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

7. w/ Speaker:

REMOVE SPEAKER

8. w/o Speaker:

REMOVE SPEAKER HOLE COVER

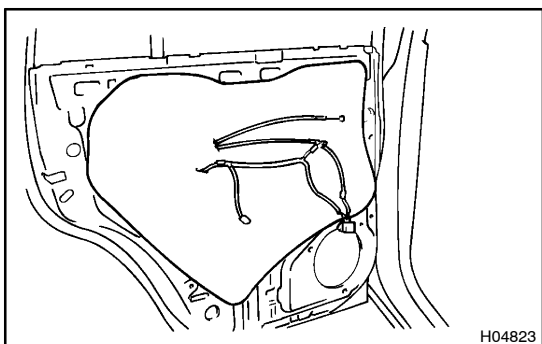

9. REMOVE SERVICE HOLE COVER


- (a) Remove the clamps and wire harness.
- (b) Remove the service hole cover.

NOTICE:

Do not tear the cover.

HINT:


At the time of assembly, please refer to the following item.
Bring out the 2 control cables and wire harness through the service hole cover.

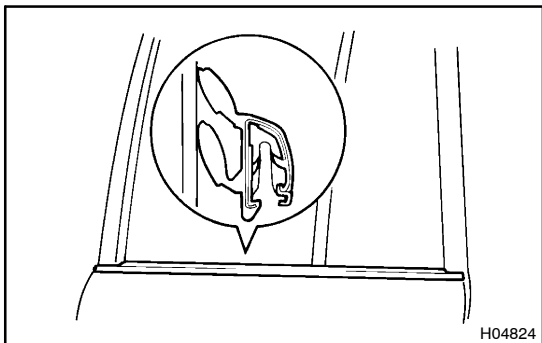**10. REMOVE DOOR BELT MOULDING**

Using a scraper, remove the door belt moulding.

HINT:


Tape the scraper tip before use.

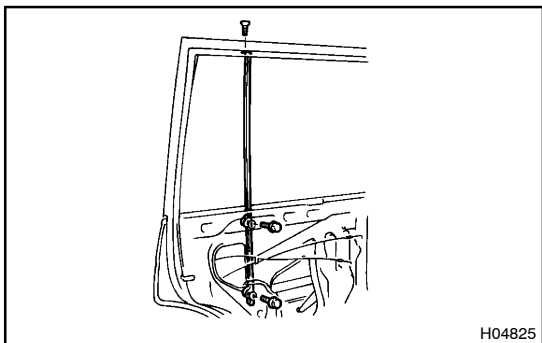11. REMOVE DOOR GLASS RUN**12. REMOVE DIVISION BAR**

Remove the 2 bolts, screw and division bar.

13. REMOVE THESE PARTS:

- (a) Door glass
- (b) Quarter window glass with weatherstrip

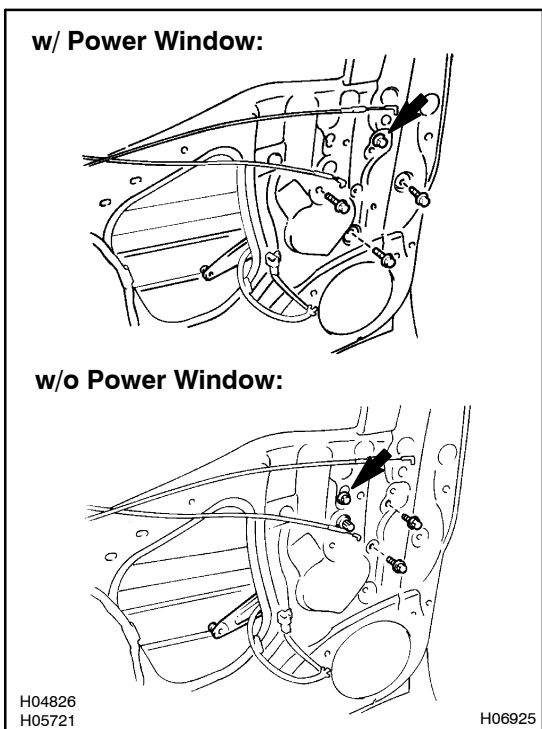**14. REMOVE WINDOW REGULATOR**

- (a) w/ Power Window:

Disconnect the connector, then remove the 3 bolts.

Torque: 5.0 N·m (5 1 kgf·cm, 44 in·lbf)

- (b) w/o Power Window:

Remove the 2 bolts.



Torque: 5.0 N·m (5 1 kgf·cm, 44 in·lbf)

- (c) Loosen the bolt and window regulator.

Torque: 5.0 N·m (5 1 kgf·cm, 44 in·lbf)

HINT:

Remove the regulator through the service hole.

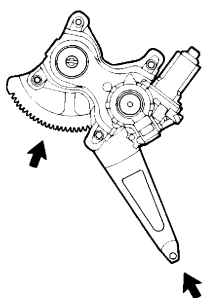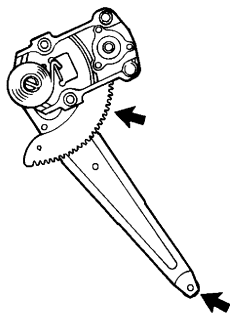w/ Power Window:**w/o Power Window:**H04827
H05722



H06926

HINT:

At the time of assembly, please refer to the following item.
Apply MP grease to the window regulator.

NOTICE:

At the time of assembly, please refer to the following item.
Do not apply grease to the spring of the window regulator.

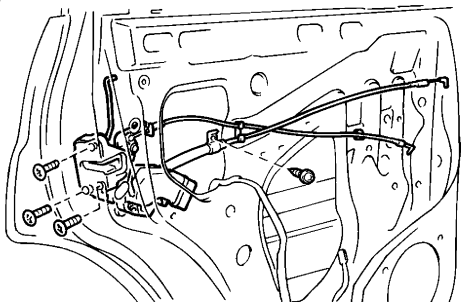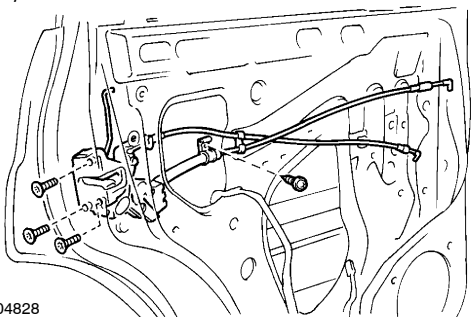w/ Power Door Lock:**w/o Power Door Lock:**H04828
H05723

H06927

15. REMOVE DOOR LOCK

- (a) Remove the screw from the link protector.
- (b) w/ Power Door Lock:
Disconnect the connector.
- (c) Disconnect the link from outside handle.
- (d) Using a torx wrench, remove the 3 screws and door lock.

Torx wrench: T30 (Part No. 09042 -00010 or locally manufactured tool)

Torque: 5.0 N·m (5 1 kgf·cm, 44 in·lbf)

HINT:

Remove the door lock through the service hole.


HINT:

At the time of assembly, please refer to the following items.


- Apply adhesive to 3 screws.

Part No. 08833 -00070, THREE BOND 1324 or equivalent.

w/ Power Door Lock:

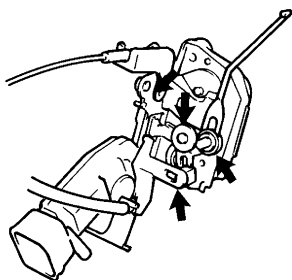

w/o Power Door Lock:

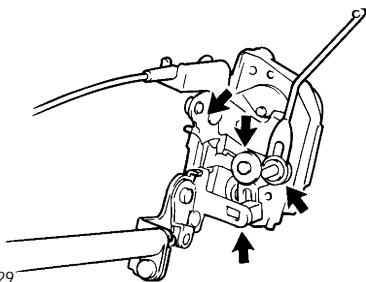

H04829
H05724

H06928

- S Apply MP grease to the sliding and rotating parts of the door lock.

16. REMOVE OUTSIDE HANDLE

Remove the 2 bolts and outside handle.