

## REMOVAL

### 1. REMOVE ROOF HEADLINING REAR TRIM

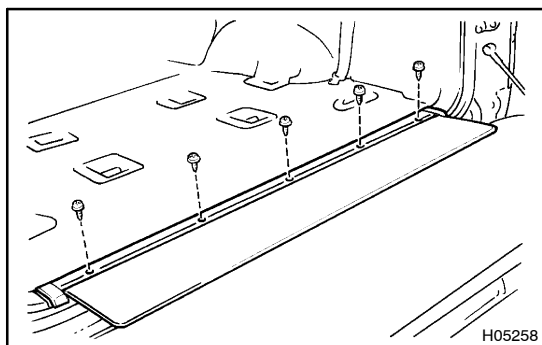
Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.

### 2. w/ Rear No.2 Seat:

#### REMOVE REAR NO.2 SEAT



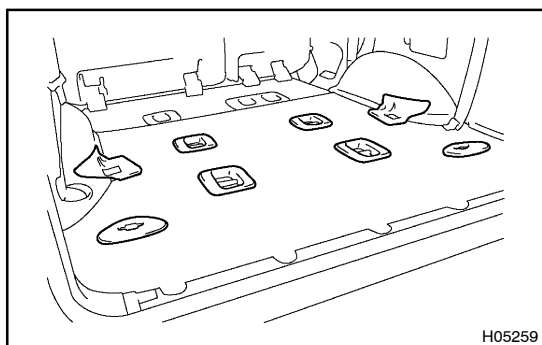
### 3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.



### 4. w/ Rear No.2 Seat (Forward -Facing Type): REMOVE STRIKER PLATE

Using a screwdriver, remove the striker plates.

### 5. REMOVE THESE PARTS:

(a) w/ Tonneau cover:

Tonneau cover

(b) Rear mat

(c) w/ Rear No.2 Seat (Forward -Facing Type):

Rear No.2 seat outer belt floor anchor

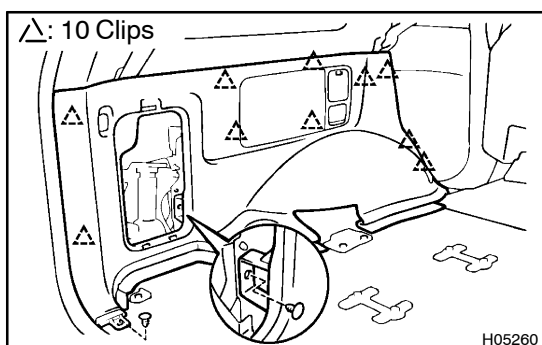
**Torque: 43 N·m (440 kgf·cm, 30 ft·lbf)**

(d) Rear No.1 seat outer belt floor anchor

**Torque: 43 N·m (440 kgf·cm, 30 ft·lbf)**

(e) Rear door scuff plate

(f) Rear door opening trim

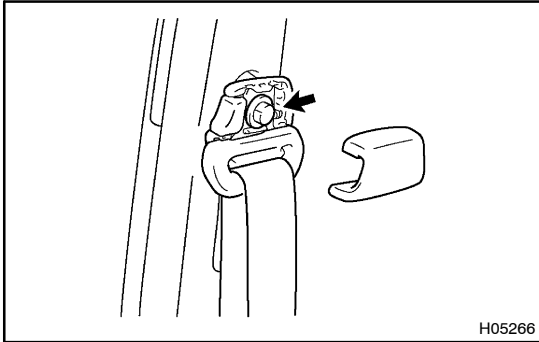


### 6. REMOVE QUARTER TRIM PANEL

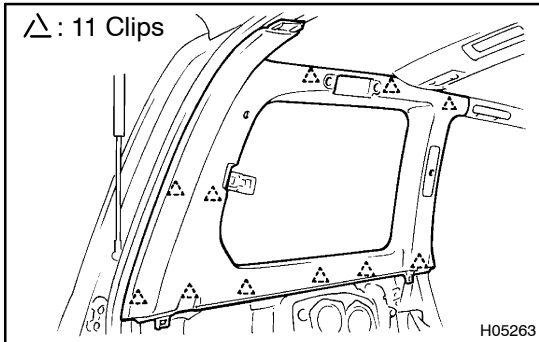
(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.

(c) Remove the quarter trim panel, then disconnect the connector.

**7. REMOVE THESE PARTS:**

- (a) w/ Rear No.2 Seat (Forward -Facing Type):  
Rear No.2 seat outer belt shoulder anchors  
**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**
- (b) Rear No.1 seat outer belt shoulder anchors  
**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

**8. REMOVE UPPER ROOF SIDE INNER GARNISH**

- (a) w/ Rear No.2 Seat (Forward -Facing Type):  
Using a screwdriver, remove the assist grip plugs, then remove the 2 screws and assist grip.

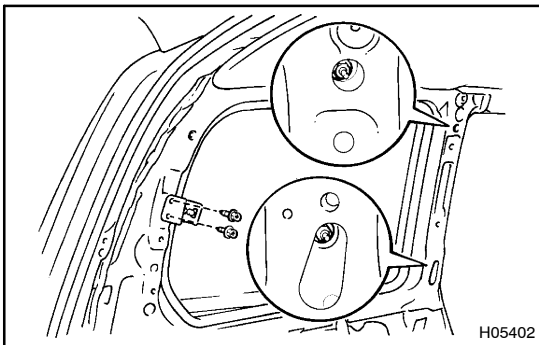
**HINT:**

Tape the screwdriver tip before use.

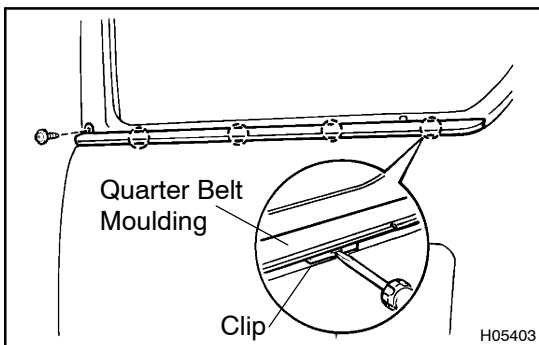
- (b) Using a screwdriver, remove the upper roof side inner garnishes.

**HINT:**

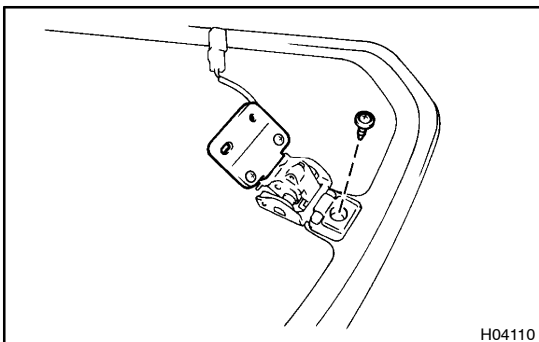
Tape the screwdriver tip before use.

**9. REMOVE QUARTER WINDOW GLASS**

- (a) w/ Power Vent:  
Disconnect the connector.
- (b) w/ Antenna:  
Disconnect the connector.
- (c) Remove the 2 bolts, 2 nuts and quarter window glass.

**10. REMOVE QUARTER WINDOW GLASS WEATHERSTRIP****11. REMOVE QUARTER BELT MOULDING**

- (a) Remove the screw.
- (b) Using a screwdriver, remove the quarter belt moulding.

**12. w/Power Vent:****REMOVE REAR VENT WINDOW MOTOR ASSEMBLY**

Remove the screw and power vent motor assembly.