


DISASSEMBLY

1. REMOVE THESE PARTS:


- (a) No.2 side defroster nozzle duct
- (b) No.1 side defroster nozzle duct
- (c) Defroster nozzle
- (d) Center bracket
- (e) No.1 heater to register duct
- (f) Instrument panel wire harness
- (g) No.5 heater to register duct

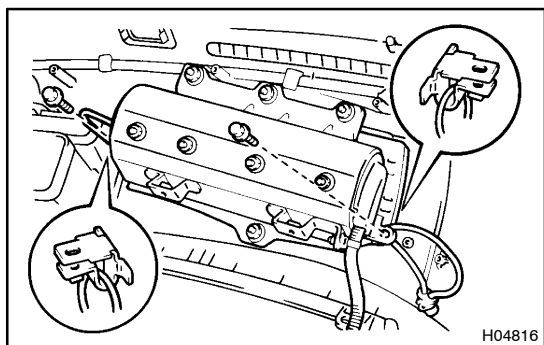

2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts and straps.

Torque: 6.0 N·m (6 1 kgf·cm, 53 in·lbf)

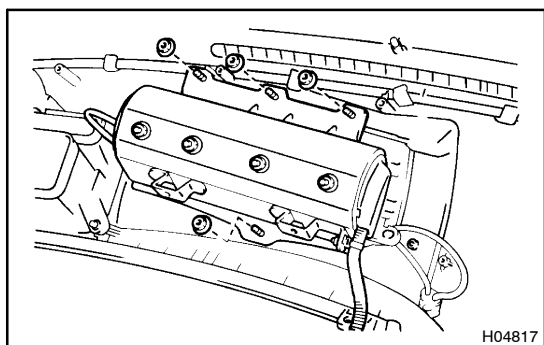

- (b) Remove the 4 nuts and front passenger airbag assembly.

Torque: 6.0 N·m (6 1 kgf·cm, 53 in·lbf)

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.

NOTICE:

- At the time of assembly, please refer to the following items.
- Pass the straps of the front passenger airbag door through the brackets on the right and left sides securely.
- Install the straps so that they are not pinched between the airbag and instrument panel.
- When installing the front passenger airbag assembly, make sure that the straps are not distorted and installed to the brackets securely.
- Make sure that the front passenger airbag assembly is installed to the specified torque.
- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.

3. REMOVE THESE PARTS:

- (a) No.1 register
- (b) No.4 register