



CLUTCH PEDAL INSPECTION

LHD:

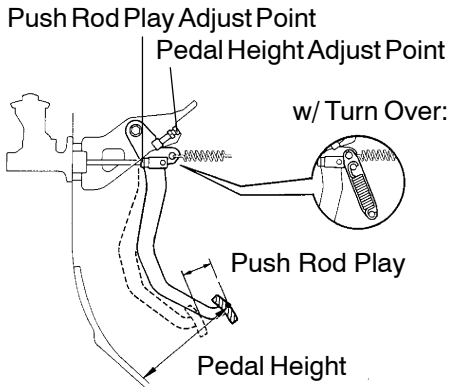

RHD:

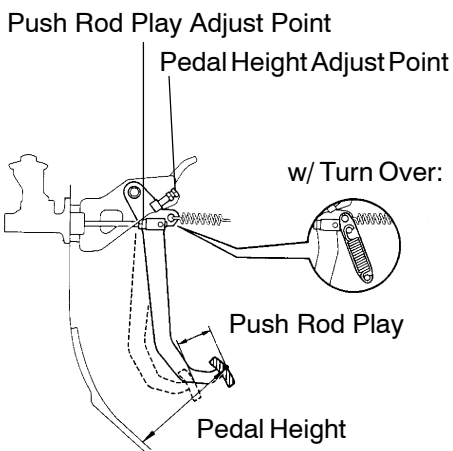

D02466

1. CHECK THAT PEDAL HEIGHT IS CORRECT

Pedal height from asphalt sheet:

LHD: 197.5 – 207.5 mm (7.776 – 8.169 in.)

RHD: 196 – 206 mm (7.717 – 8.110 in.)

2. IF NECESSARY, ADJUST PEDAL HEIGHT

- Loosen the lock nut and turn the stopper bolt until the height is correct.
- Tighten the lock nut.

3. CHECK THAT PEDAL FREEPLAY AND PUSH ROD PLAY ARE CORRECT

- Depress the pedal until the clutch resistance begins to be felt.

Pedal freeplay: 5.0 – 15.0 mm (0.197 – 0.591 in.)

- Gently depress the pedal until the resistance begins to increase a little.

Push rod play at pedal top:


1.0 – 5.0 mm (0.039 – 0.197 in.)

4. IF NECESSARY, ADJUST PEDAL FREEPLAY AND PUSH ROD PLAY


- Loosen the lock nut and turn the push rod until the freeplay and push rod play are correct.
- Tighten the lock nut.
- After adjusting the pedal freeplay, check the pedal height.

5. CHECK CLUTCH RELEASE POINT

- Pull the parking brake lever and install wheel stopper.
- Start and idle the engine.
- Without depressing the clutch pedal, slowly shift the shift lever into reverse position until the gears contact.

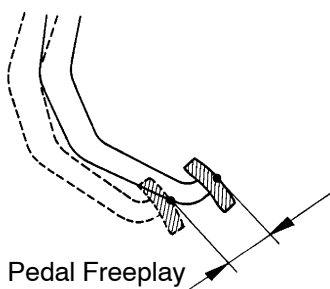

D02467

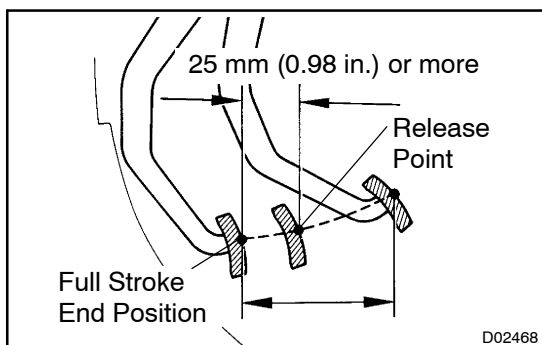

- (d) Gradually depress the clutch pedal and measure the stroke distance from the point that the gear noise stops (release point) up to the full stroke end position.

Standard distance: 25 mm (0.98 in.) or more

(From pedal stroke end position to release point)

If the distance is not as specified, perform the following operations.

- Check pedal height.
- Check push rod play and pedal freeplay.
- Bleed the clutch line.
- Check the clutch cover and disc.