


AUTOMATIC TRANSMISSION (A343F)

HOW TO PROCEED WITH TROUBLESHOOTING

DI2L4-02

When using hand -held tester, troubleshoot in accordance with the procedure on the following pages.

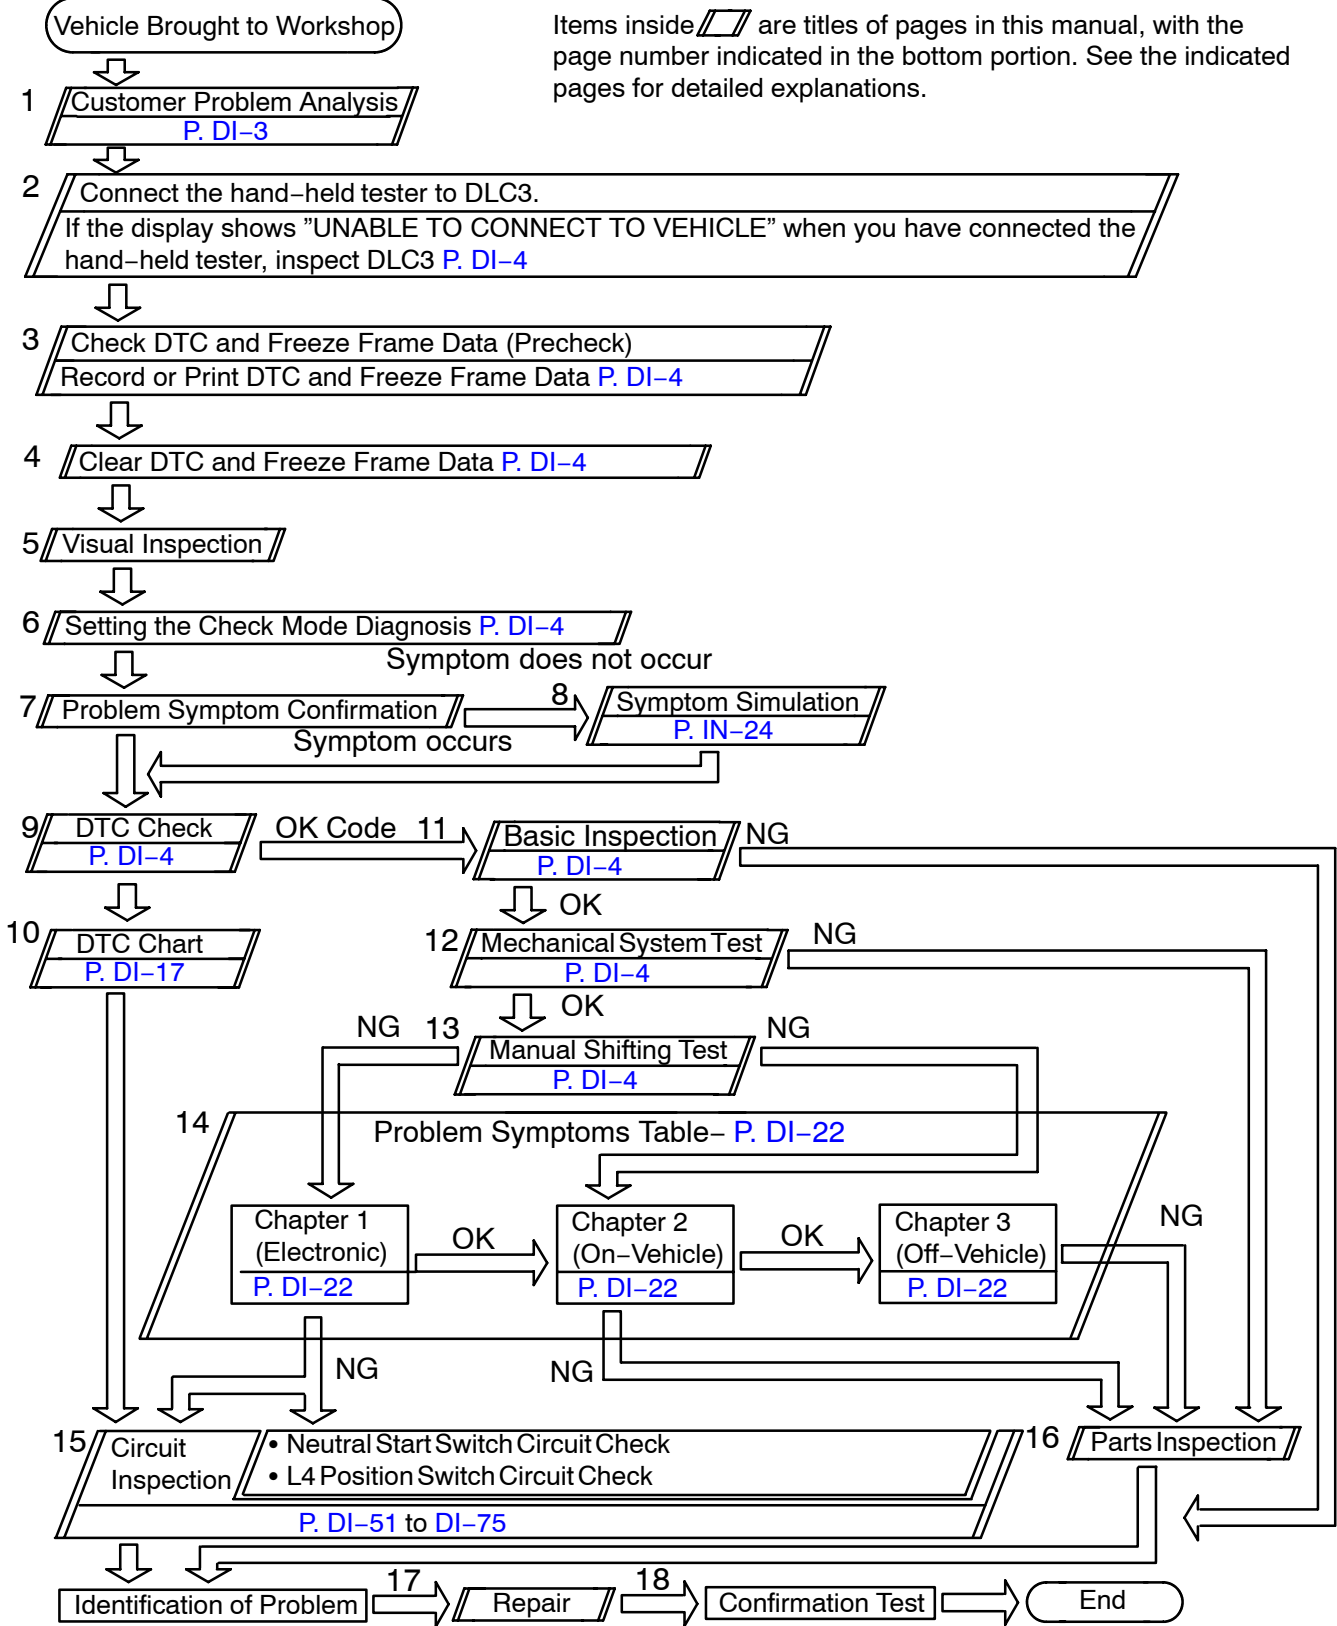

When not using hand –held tester, troubleshoot in accordance with the procedure on the following pages.

