


# TT Terminal Circuit

## CIRCUIT DESCRIPTION

Check of ECT ECU input and output signals related to the throttle position sensor, brakes shift range and other circuits can be done by measuring the voltage at terminal TT of check connector.

## WIRING DIAGRAM

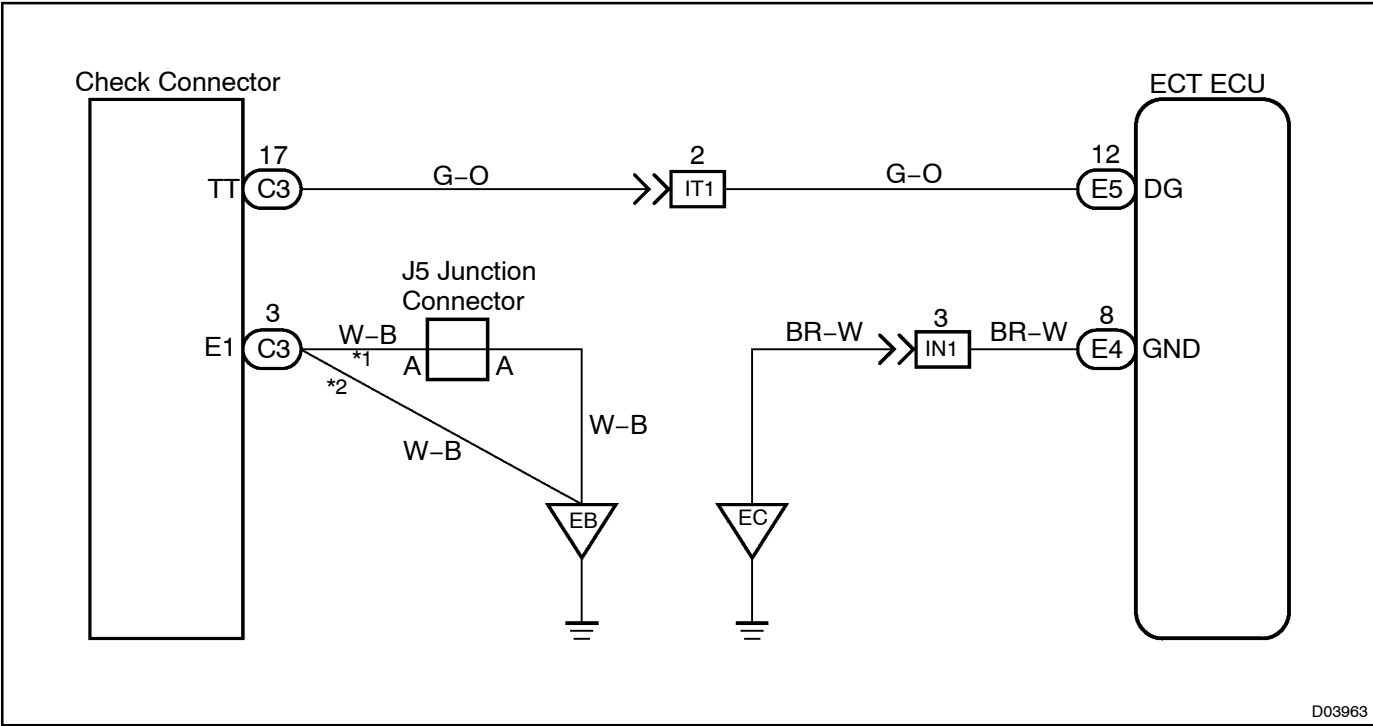

## INSPECTION PROCEDURE

1	Check harness and connector between body ground and check connector, check connector and ECT ECU (See page IN-35).
---	--

NG

Repair or replace the harness or connector.

OK

Check and replace the ECT ECU (See page IN-35).