

| | | |
|------------|-------------------|--------------------------------------------------------------------------------|
| DTC | C1762 / 62 | Fluid Pressure Abnormality (Pump & Motor Does Not Supply Fluid) |
|------------|-------------------|--------------------------------------------------------------------------------|

CIRCUIT DESCRIPTION

| DTC No. | DTC Detecting Condition | Trouble Area |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| C1762 / 62 | <p>Either of the following 1. or 2. is detected:</p> <ol style="list-style-type: none"> While the motor relay is in operation, the condition that the fluid pressure is less than 0.5 MPa (5.1 kg/cm², 73 psi) continued for 0.6 sec. When the pump motor is in delivering condition, the delivery portion does not change and the fluid pressure change is small. | <ul style="list-style-type: none"> • AHC pump & motor • Fluid pressure sensor • AHC motor relay • Fluid empty |

Fail safe function:

If the DTC C1762 / 62 detected, the height control is prohibited after adjusting the vehicle height to the standard height in case that the height is higher than the standard or to the lowest wheel of the 4 wheels in case that the height is lower than the standard.

INSPECTION PROCEDURE


| | |
|----------|-------------------------------------------------------------------|
| 1 | Check fluid level of the reservoir tank (See page SA-303). |
|----------|-------------------------------------------------------------------|

NG

Fill the reservoir tank with suspension fluid AHC.

OK

| | |
|----------|-------------------------------------------------|
| 2 | Check operation of AHC pump & motor. |
|----------|-------------------------------------------------|

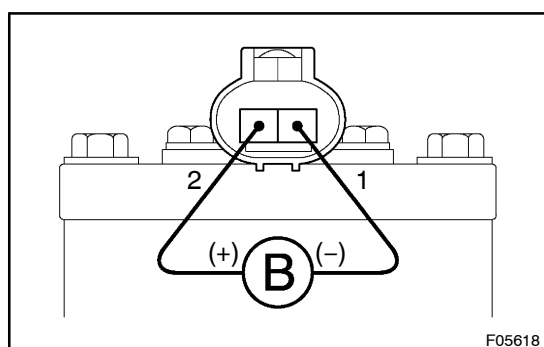

PREPARATION:

Disconnect the AHC pump & motor connector.


CHECK:

Connect positive ⊕ lead to terminal 2 and negative ⊖ lead to terminal 1 of the AHC pump & motor connector, check that the AHC pump & motor is operated.

NG

Replace AHC pump & motor.

OK

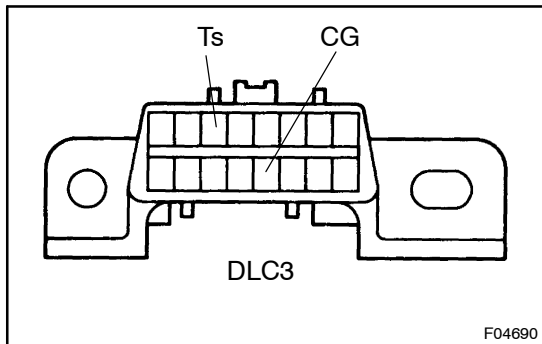3 Bleed air of AHC & skyhook TEMS hydraulic system.**PREPARATION:**

- (a) Using SST, connect the terminal Ts to CG of DLC3.
SST09843 –18040
- (b) Push the "DOWN" button of the height select switch 5 times or more within 5 seconds after starting the engine.

HINT:

At this time, the height control OFF indicator light flashes at 0.25 second intervals.

CHECK:

- (a) Change the damping mode select switch to the "COMFORT" position.
- (b) Push and hold the "UP" button of the height select switch for 10 seconds.



HINT:

At this time, the AHC motor relay comes ON in order to raise the vehicle height of the front wheels and air inside of the AHC & skyhook TEMS hydraulic system start to bleed with the pump motor operating.

NOTICE:


Do not raise the vehicle height higher than the "HI" position when raising it with the active test.

- (c) Turn the ignition switch OFF, disconnect SST from DLC3.
SST09843 –18040

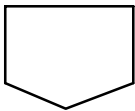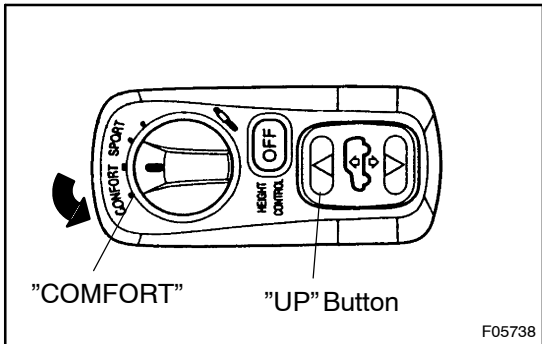

4

Check AHC motor relay.

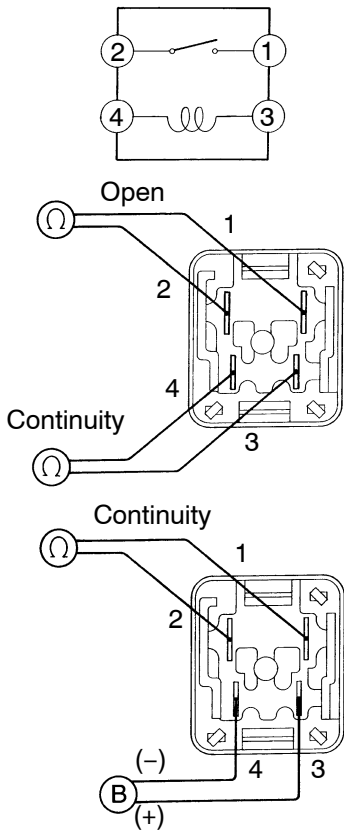

PREPARATION:

Remove the AHC motor relay from Engine Room J/B.

CHECK:

Check continuity between each pair of terminal of motor relay.

OK:

| | |
|-------------------|--------------------------------------|
| Terminals 3 and 4 | Continuity (Reference value 62 Ω) |
| Terminals 1 and 2 | Open |

CHECK:

- (a) Apply battery voltage between terminals 3 and 4.
- (b) Check continuity between terminals 1 and 2.


OK:

| | |
|-------------------|------------|
| Terminals 1 and 2 | Continuity |
|-------------------|------------|

NG

Replace AHC motor relay.

OK

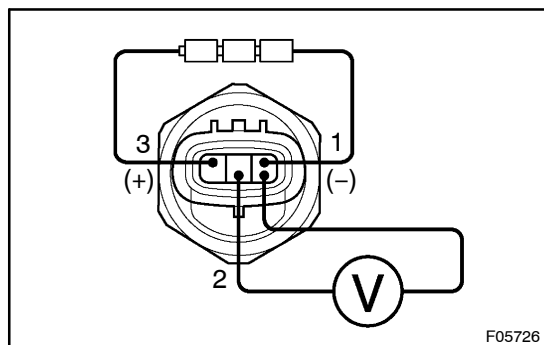5 Check fluid pressure sensor.**PREPARATION:**

Disconnect the fluid pressure sensor connector.

CHECK:

- (a) Connect 3 dry batteries of 1.5 V in series.
- (b) Connect terminal 3 to the batteries' positive (+) terminal, and terminal 1 to the batteries' negative (-) terminal, then apply voltage about 4.5 V between terminals 1 and 3.
- (c) Measure voltage between terminals 1 and 2.

OK:

Voltage: Approx. 4.5 V

NG

Replace fluid pressure sensor.

OK

Clear the DTC (See page DI-208).