

DTC	C 1251 / 51	Hydraulic Brake Booster Pump Motor Malfunction
------------	--------------------	-------------------------------------------------------


CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1251/51	Either of the following (1) or (2) is detected: (1) After turning the ignition switch ON, the current of more than 30A flows to the motor for more than 1 sec. (2) After turning the ignition switch ON, less than 7A change in current is detected more than 3 times in a row when the motor is ON.	• Hydraulic brake booster pump motor

Fail safe function:


If trouble occurs in the pump motor, the ECU cuts off current to the ABS solenoid relay and prohibits ABS control.

WIRING DIAGRAM

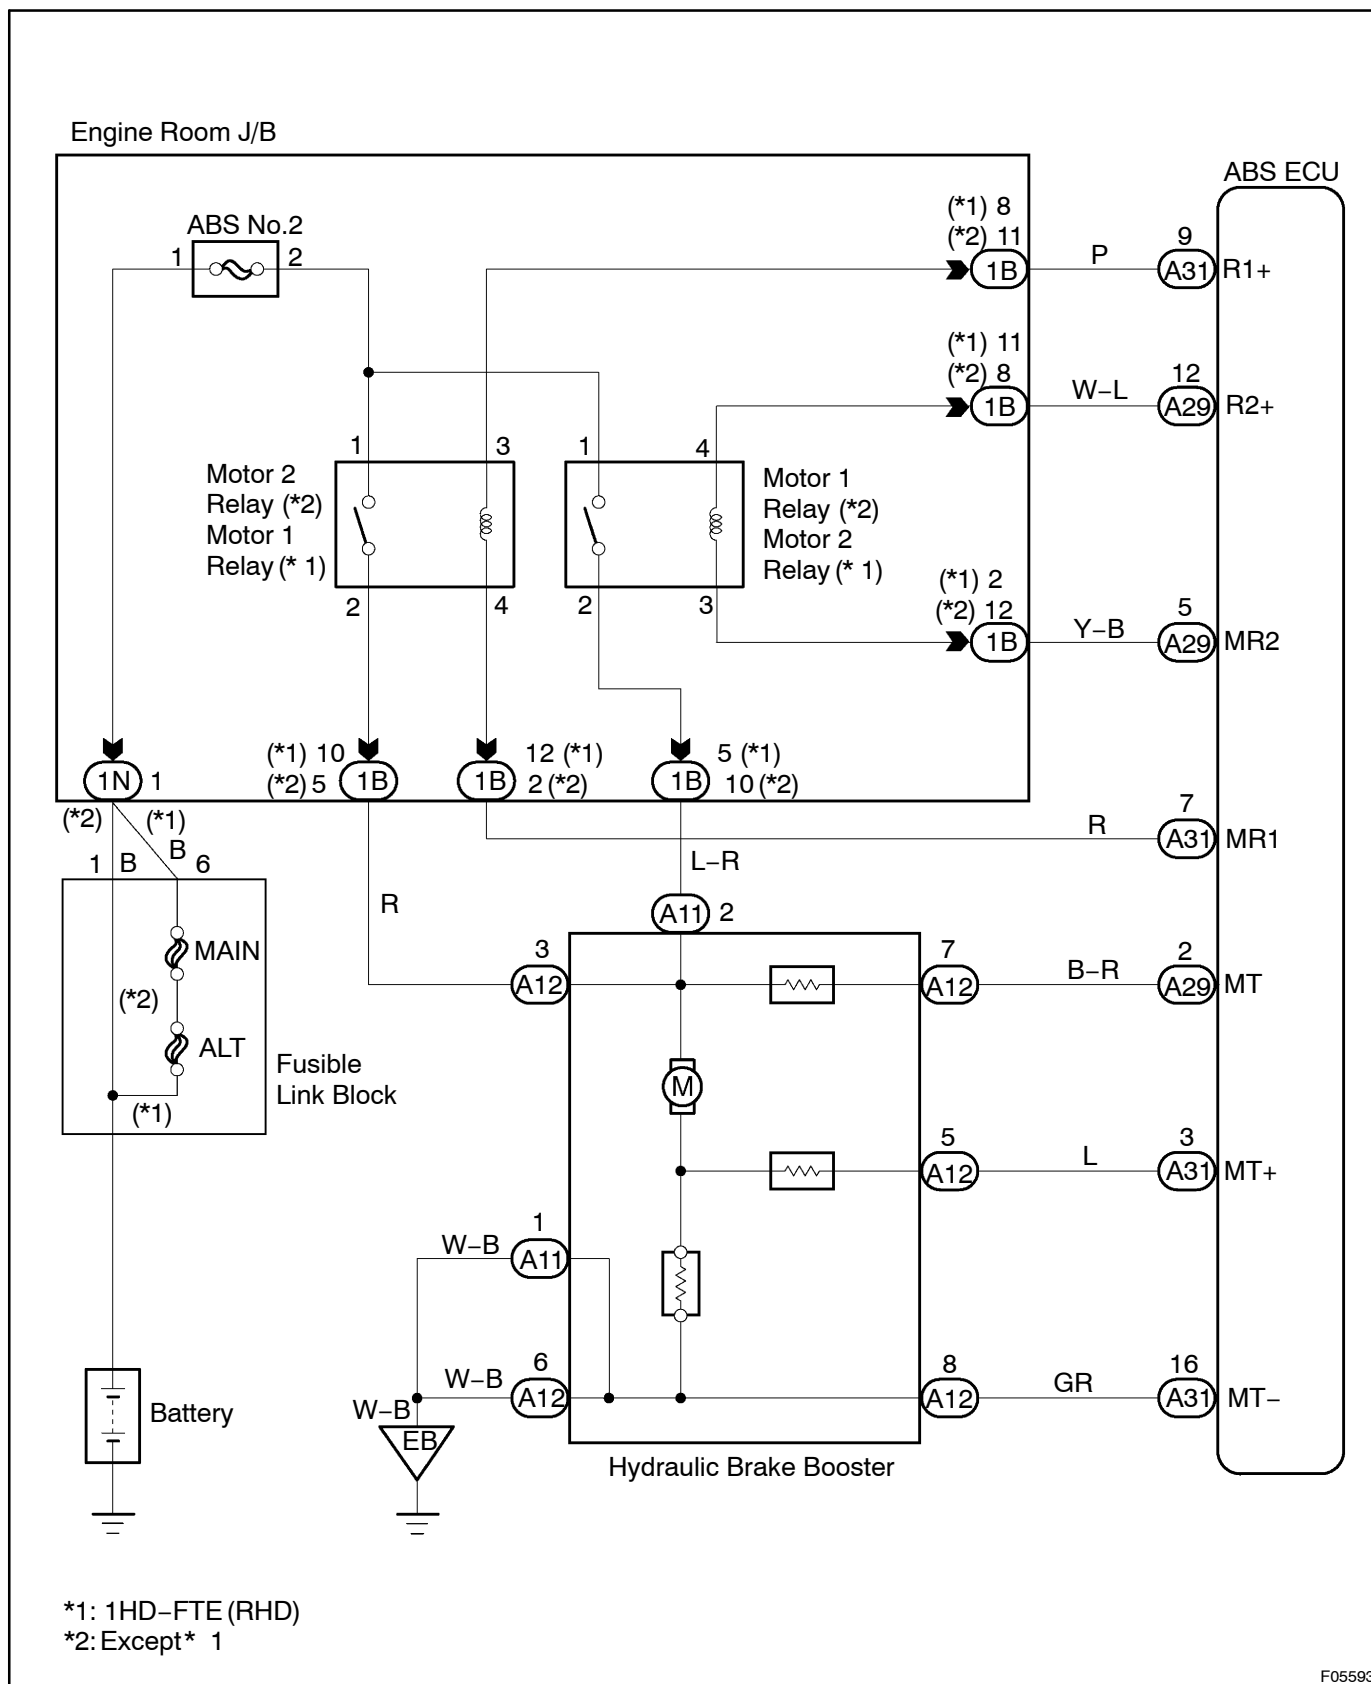

INSPECTION PROCEDURE

1 Check operation of hydraulic brake booster pump motor.

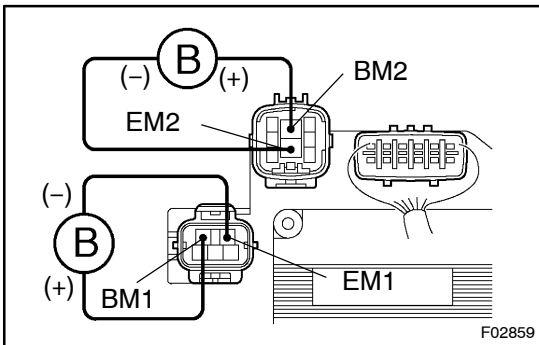

PREPARATION:

Disconnect the 2 connectors from the hydraulic brake booster.

CHECK:

Connect battery positive \oplus lead to BM 1 or BM2 terminal and battery negative \ominus lead to EM 1 or EM2 terminal of the hydraulic brake booster (pump motor) connector.

OK:


The operation sound of the pump motor should be heard.

OK

Go to step 4.

NG

2 Check continuity between GND terminal of hydraulic brake booster (pump motor) connector and body ground.

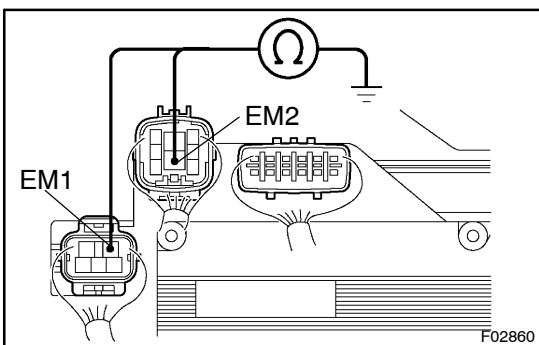

CHECK:

Check continuity between each of EM 1 and EM2 terminals of hydraulic brake booster (pump motor) connector and body ground.


OK:

Continuity

NG

Repair or replace harness or connector.

OK

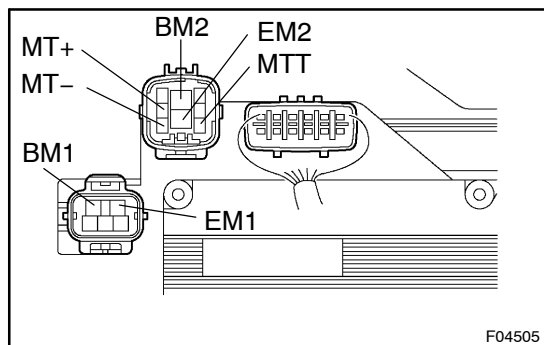3 Check hydraulic brake booster resistance.**PREPARATION:**

Disconnect the 2 connectors from the hydraulic brake booster.

CHECK:

Connect resistance between terminals MT+ and MT -, B M1 and MTT, BM2 and MTT, EM 1 and MT+, EM2 and MT+ of the hydraulic brake booster connector.

OK:

30 – 36 Ω

NG

Repair the hydraulic brake booster.

OK

Replace hydraulic brake booster pump motor.

- | | |
|---|----------------------------------------------------------------------------------------------------------------------------|
| 4 | Check for open circuit in harness and connector between hydraulic brake booster (pump motor) and ABS ECU (See page IN-24). |
|---|----------------------------------------------------------------------------------------------------------------------------|

NG

Repair or replace harness or connector.

OK

- | | |
|---|----------------------------------------------------------------------------------------------------------------|
| 5 | Check for open or short circuit in harness and connector between pressure switch and ABS ECU (See page IN-24). |
|---|----------------------------------------------------------------------------------------------------------------|

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.