


DTC	B2603	Tilt and Telescopic Manual switch circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The different voltage value is input to tilt and telescopic ECU by operating the manual switch. Then tilt and telescopic ECU judges which motor and which direction tilt motor or telescopic motor should be moved based on the voltage value.

DTC No.	DTC Detecting Condition	Trouble Area
B2603	The abnormal voltage value which is not within the specification is input to tilt and telescopic ECU when being operated with the manual switch.	<ul style="list-style-type: none"> • Tilt and telescopic manual switch circuit • Tilt and telescopic ECU

WIRING DIAGRAM

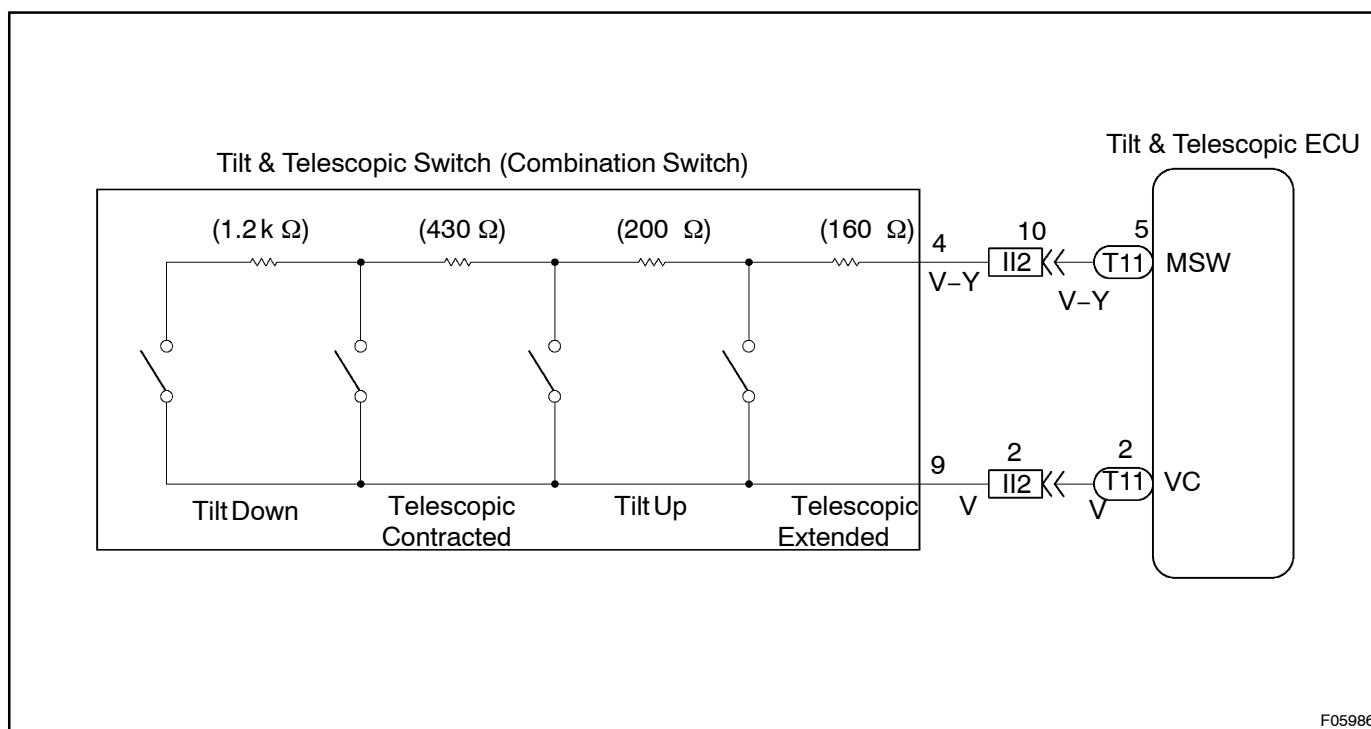

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check tilt and telescopic manual switch circuit. (See page DI-442) |
|---|--|

NG**Repair or replace.****OK****Check and replace the tilt and telescopic ECU.**