


Power main relay circuit

CIRCUIT DESCRIPTION

Power main relay will be "ON" by operating the power window switch.

WIRING DIAGRAM

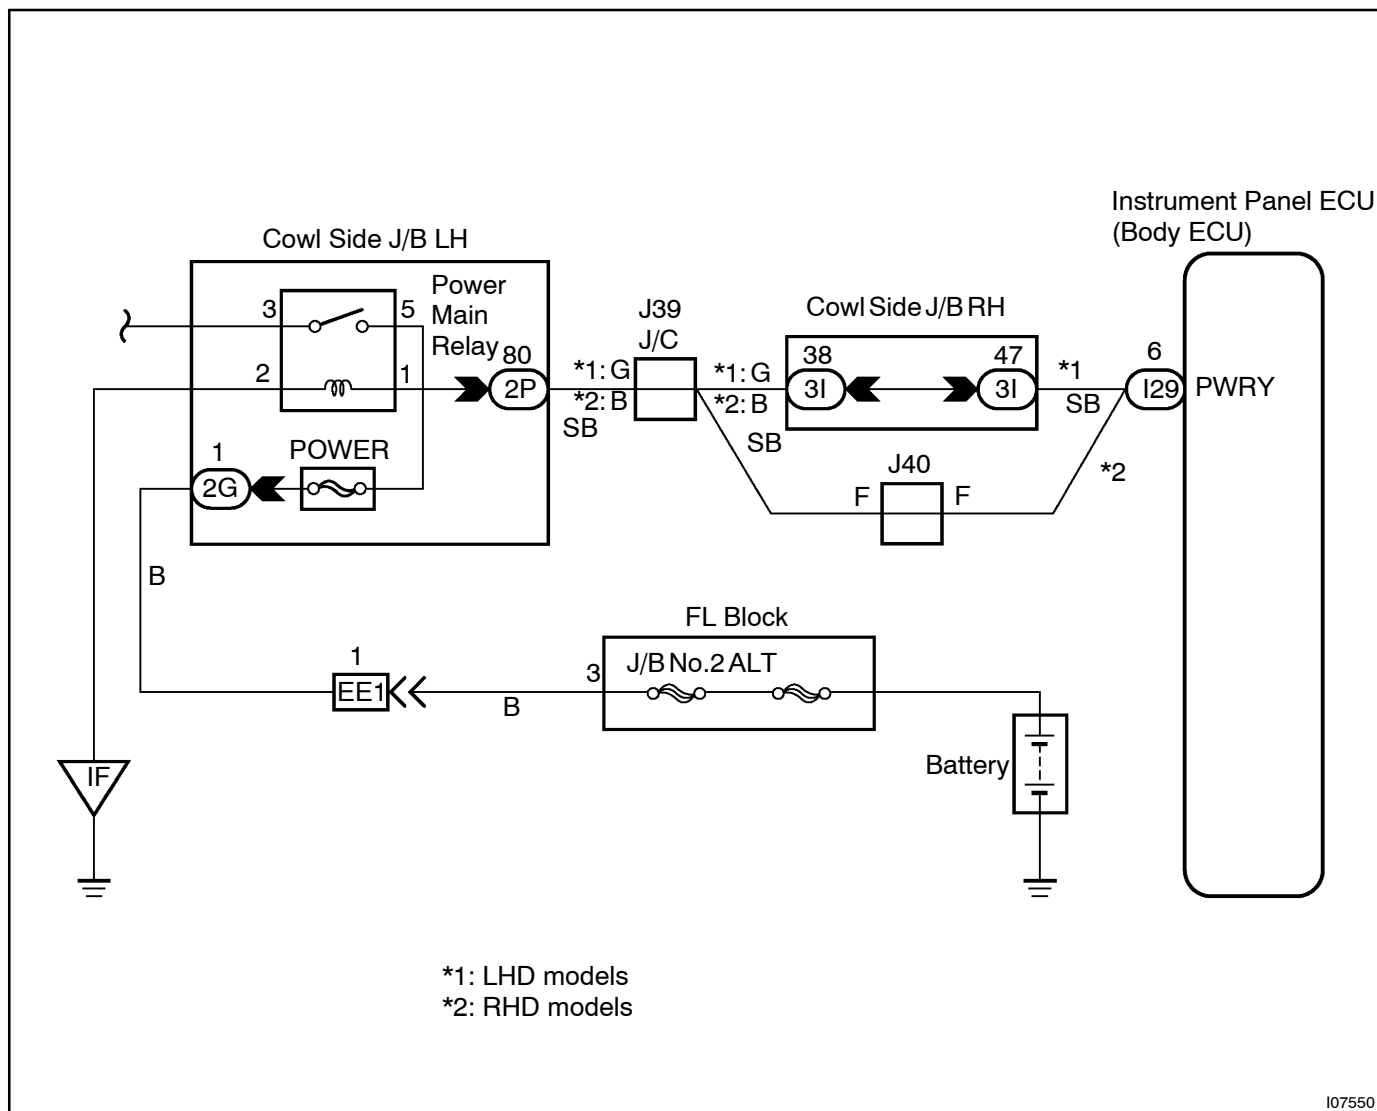

I07550

INSPECTION PROCEDURE

1 Check power main relay. ([See page BE-26](#))

NG

Replace the power main relay.

OK

2 Check wireharness and connector between power main relay and Body ECU, battery and power main relay.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
([See page DI-773](#))