


DISASSEMBLY

1. REMOVE OIL SEAL AND BEARING

- (a) Using SST, remove the oil seal.
SST09308 -00010
- (b) Remove the bearing from the axle hub.

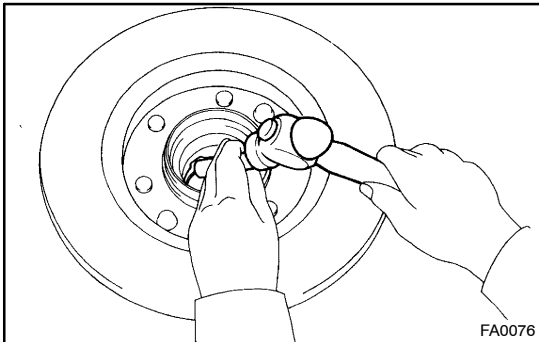


2. REMOVE BEARING OUTER RACES

Using a brass bar and hammer, remove the 2 bearing outer races.

3. INSPECT BEARINGS

Clean the 2 bearings and outer races and inspect them for wear or damage.

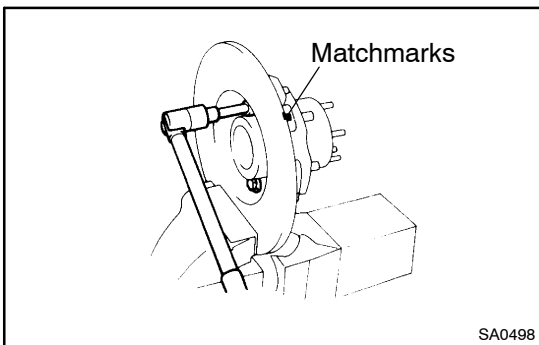

4. REMOVE DISC

- (a) Place matchmarks on the axle hub and disc.
- (b) Remove the 5 bolts and disc from the axle hub.