


REPLACEMENT

1. REMOVE BUSHING

Using SST and a press, remove the bushing from the lateral control rod.

SST 09710-22042 (09710-02051, 09710-02071),
09950-70010 (09951-07150)

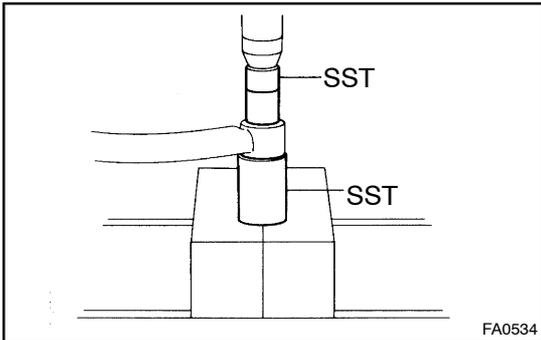

2. INSTALL BUSHING

Using SST and a press, install a new bushing into the lateral control rod.

SST 09710-22042 (09710-02051, 09710-02071)

HINT:

Do not use a lubricant when pressing in the bushing.