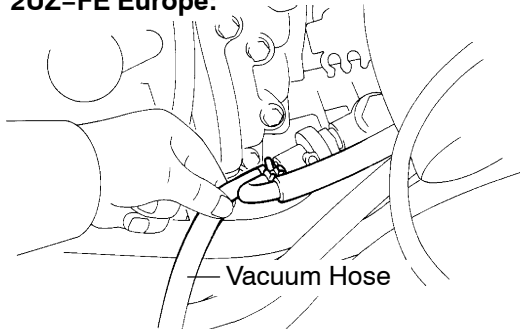
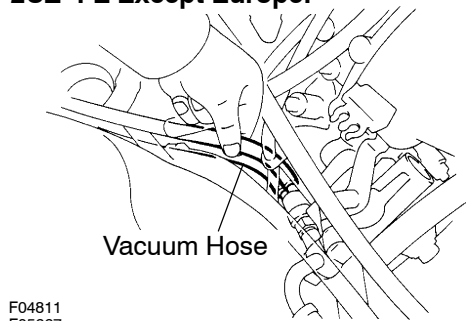


2UZ-FE Europe:**2UZ-FE Except Europe:**F04811
F05667

F05668

AIR CONTROL VALVE INSPECTION

1. **TURN AIR CONDITIONING SWITCH OFF**
2. **CHECK IDLE-UP**
 - (a) Start the engine and run it at idle.
 - (b) Fully turn the steering wheel.
 - (c) Check that the engine rpm decreases when the vacuum hose of the air control valve is pinched.
 - (d) Check that the engine rpm increases when the hose is released.