


## REPLACEMENT

### HINT:


There are 2 methods (a and b) to replace the oil seal which are as follows:

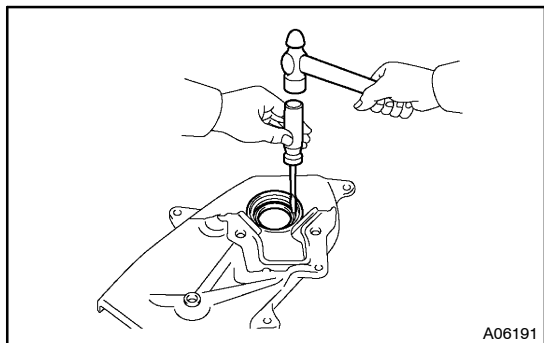

### REPLACE CAMSHAFT OIL SEAL

(a) If camshaft oil seal retainer is removed from cylinder head:


(1) Using a screwdriver, tap out the oil seal.

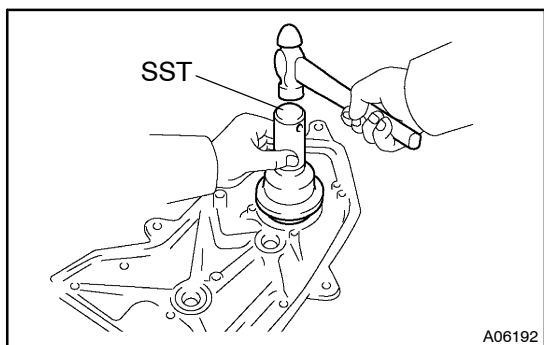

(2) Using SST and a hammer, tap in a new oil seal until its surface is flush with the oil seal retainer edge.

SST 09223 - 46011

(3) Apply MP grease to the oil seal lip.

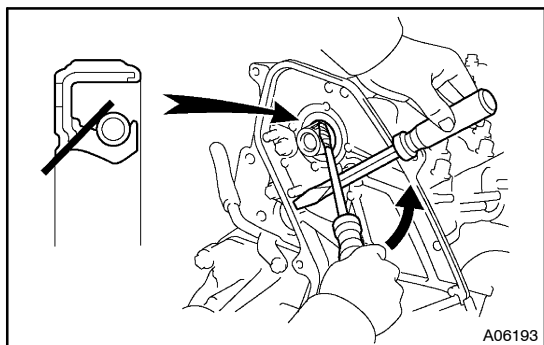


(b) If camshaft oil seal retainer is installed to cylinder head.

(1) Using a knife, cut off the oil seal lip.

(2) Using 2 screwdrivers, pry out the oil seal.

### NOTICE:

**Be careful not to damage the camshaft. Tape the screwdriver tip.**

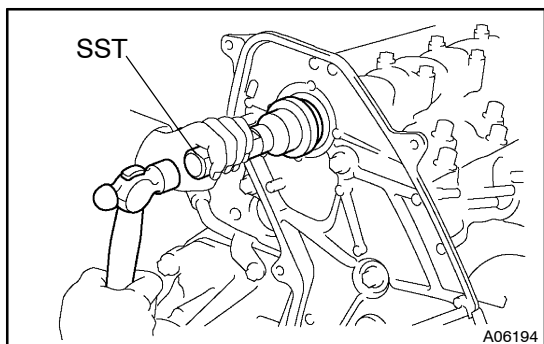

(3) Apply MP grease to a new oil seal lip.

(4) Using SST and a hammer, tap in the oil seal retainer edge.

SST 09223 - 46011