


INSTALLATION

1. INSTALL FUEL PUMP FILTER TO SUB FUEL PUMP

Install the pump filter with a new clip.

2. INSTALL SUB FUEL PUMP TO FUEL PUMP BRACKET

- Install the rubber cushion to the sub fuel pump.
- Connect the fuel hose to the outlet port of the sub fuel pump.
- Install the sub fuel pump by pushing the lower side of the sub fuel pump.
- Connect the lead wire connector to the sub fuel pump.

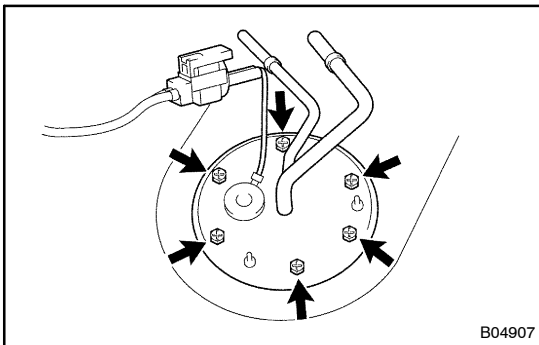

3. INSTALL SUB FUEL PUMP AND BRACKET ASSEMBLY

- Install a new gasket to the fuel pump bracket.
- Attach the sub fuel pump and bracket assembly to the sub fuel tank.
- Install the fuel pump bracket with the 6 bolts.

Torque: 3.5 N·m (35 kgf·cm, 31 in·lbf)

4. CONNECT SUB FUEL PUMP CONNECTOR

5. INSTALL SUB FUEL TANK TO VEHICLE

6. CHECK FOR FUEL LEAKS ([See page FI – 1](#))