



INSTALLATION

1. INSTALL INJECTORS AND DELIVERY PIPE


- (a) Install a new grommet to the injector.
- (b) Apply a light coat of gasoline to a new O-ring and install it to the injector.

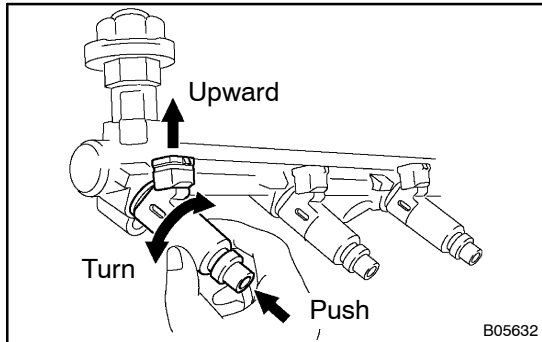


- (c) While turning the injector left and right, install it to the delivery pipe. Install the 6 injectors.
- (d) Position the injector connector upward.

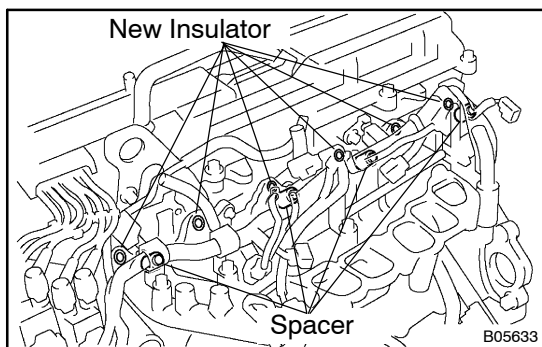

- (e) Place 6 new insulators and the 4 spacers in position on the intake manifold.

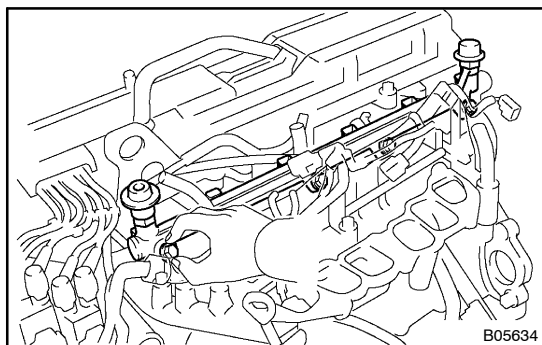

- (f) Place the 6 injectors and delivery pipe assembly in position on the intake manifold.
- (g) Temporarily install the 4 bolts holding the delivery pipe to the intake manifold.

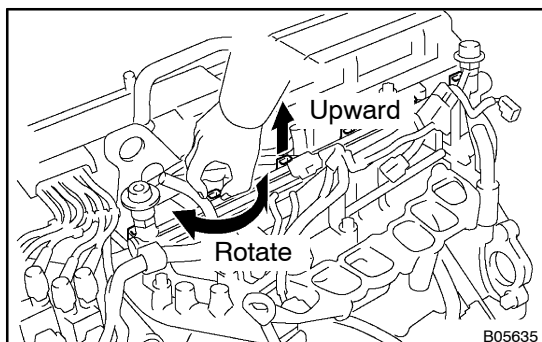


- (h) Check that the injectors rotate smoothly.

HINT:

If the injectors do not rotate smoothly, the probable cause is in correct installation of the O-rings. Replace the O-rings.

- (i) Position the injector connector upward.

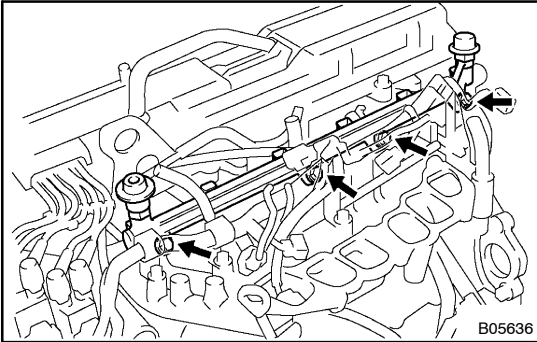

- (j) Tighten the 4 bolts holding the delivery pipe to the intake manifold.

Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

2. CONNECT INJECTOR CONNECTORS

3. CONNECT FUEL RETURN HOSE TO FUEL PRESSURE REGULATOR

4. CONNECT FUEL INLET HOSE TO DELIVERY PIPE

Connect the inlet hose with 2 new gaskets and the union bolt.


Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)

5. CONNECT VACUUM SENSING HOSE TO FUEL PRESSURE REGULATOR

6. INSTALL PCV HOSES

HINT:

Install the thinner PCV hose so that the white paint mark on it faces upward and toward the cylinder head cover side.

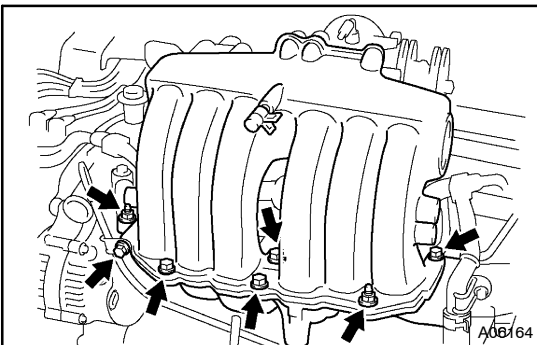


7. INSTALL INTAKE MANIFOLD ASSEMBLY

- (a) Install a new gasket and the intake manifold and delivery pipe assembly with the 4 bolts and 2 nuts.

Torque: 28 N·m (280 kgf·cm, 2 1 ft·lbf)

- (b) Install oil level gage with the bolt.

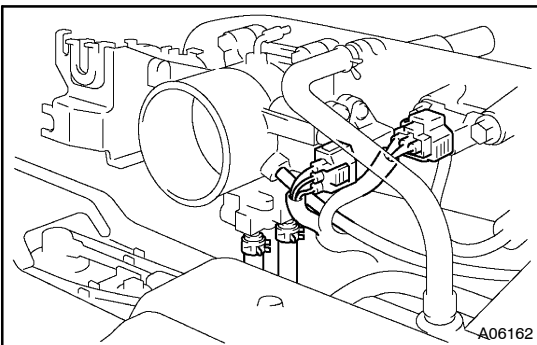


- (c) Install a new gasket and the throttle body with the 3 bolts.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

- (d) Connect the air hose for the fuel pressure regulator to the throttle body.

- (e) Connect these connectors:

- Throttle position sensor connector

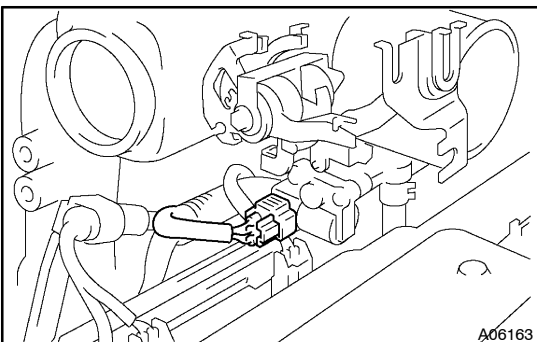

- ISC valve connector

8. CONNECT CONTROL CABLES TO THROTTLE BODY

Connect these cables:

- Accelerator cable
- A/T:
Throttle cable

9. INSTALL AIR CLEANER CAP AND HOSE

10. FILL WITH ENGINE COOLANT