


INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- (a) Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.
- (b) While turning the pressure regulator left and right, install it to the delivery pipe.
- (c) Install the pressure regulator with the 2 bolts.

Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)

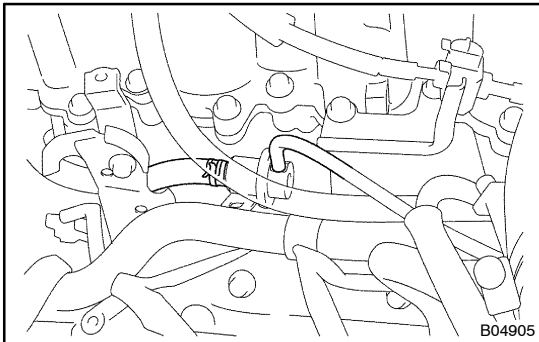

- (d) Connect these hoses to the pressure regulator:
 - Vacuum sensing hose to intake air resonator
 - Fuel return hose

2. CHECK FOR FUEL LEAKS ([See page FI-1](#))

3. INSTALL V-BANK COVER