



INSPECTION

1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR
3. DISCONNECT THROTTLE BODY FROM INTAKE MANIFOLDS (See page FI-64)
4. REMOVE UPPER AND LOWER INTAKE MANIFOLDS ASSEMBLY (See page EM-33)

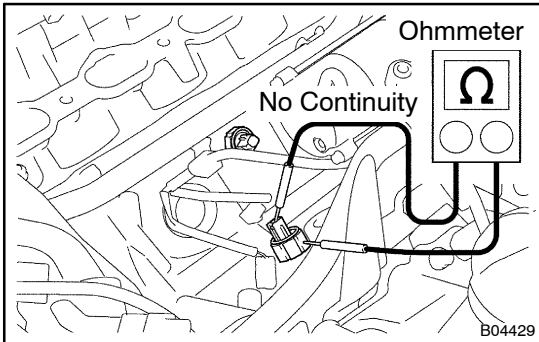

5. INSPECT KNOCK SENSOR

- (a) Disconnect the knock sensor connectors.
- (b) Using an ohmmeter, check that there is no continuity between the terminal and body.

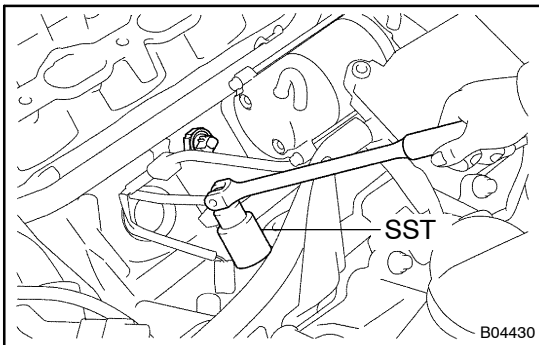

If there is continuity, replace the sensor with SST.

SST098 16-30010

Torque: 45 N·m (450 kgf·cm, 33 ft·lbf)

- (c) Reconnect the knock sensor connectors.
6. REINSTALL UPPER AND LOWER INTAKE MANIFOLDS ASSEMBLY (See page EM-55)
7. REINSTALL THROTTLE BODY TO INTAKE MANIFOLDS (See page FI-64)
8. REINSTALL INTAKE AIR CONNECTOR
9. REINSTALL V-BANK COVER