

DISASSEMBLY

1. w/ Seatback board:

REMOVE SEATBACK BOARD

Remove the seatback board as shown in the illustration.


HINT:

Remove the seatback board in order "A" and "B" as shown in the illustration.

2. REMOVE HEADREST

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE


Remove the screw and reclining adjuster release handle.

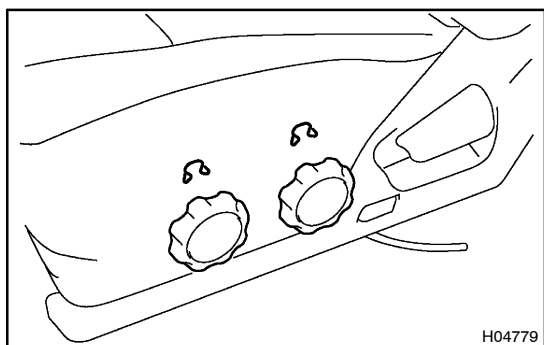

4. Vertical adjuster type:

REMOVE VERTICAL SEAT ADJUSTER KNOB


- (a) Remove the snap rings.
- (b) Remove the vertical seat adjuster knobs.

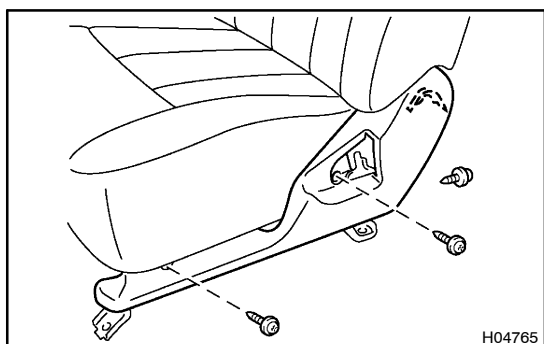

5. w/o Lumber support:

REMOVE SEAT CUSHION OUTER SHIELD


- (a) Remove the 3 screws.
- (b) Remove the seat cushion outer shield as shown in the illustration.

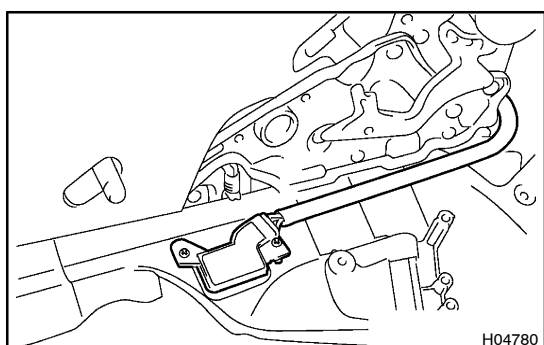


6. w/ Lumber support:

REMOVE SEAT CUSHION OUTER SHIELD


- (a) Remove the 3 screws.
- (b) Disconnect the connector as shown in the illustration.
- (c) Remove the seat cushion outer shield.
- (d) remove the 2 screws and lumbar support switch.

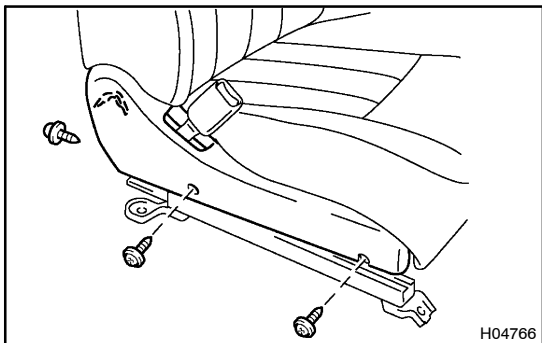**7. REMOVE SEAT CUSHION INNER SHIELD**


- (a) Remove the 3 screws.
- (b) Remove the seat cushion inner shield as shown in the illustration.

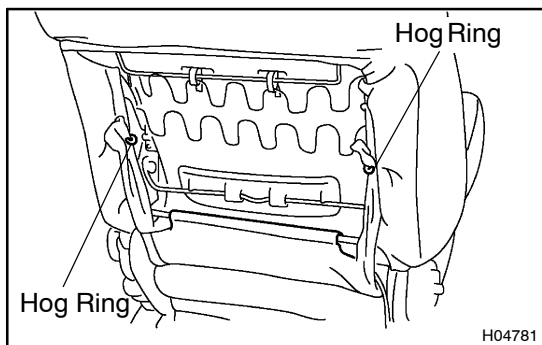**8. w/ Seatback board:****REMOVE SEATBACK ASSEMBLY**


- (a) Remove the 2 hog rings.
- (b) Disengage the hook.

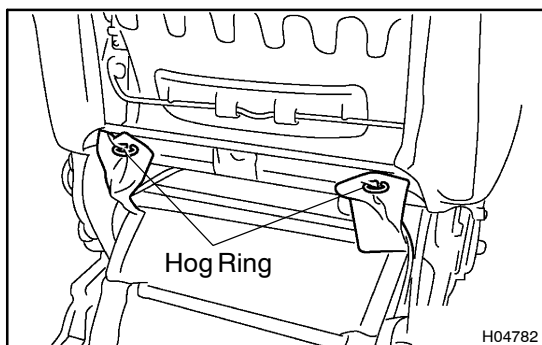


- (c) Remove the 2 hog rings.

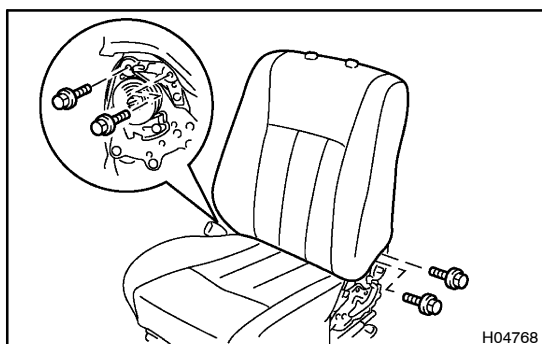


- (d) Remove the 4 bolts and seatback assembly.

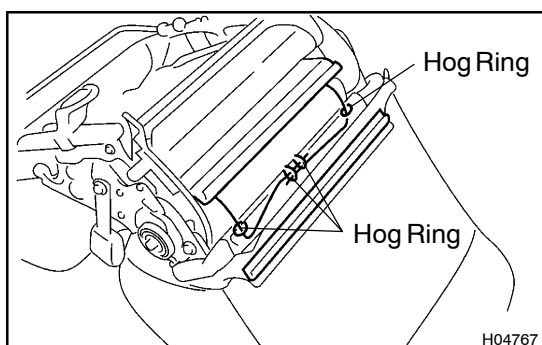**9. w/o Seatback board:****REMOVE SEATBACK ASSEMBLY**

- (a) Disengage the hook.
- (b) Remove the 4 hog rings.

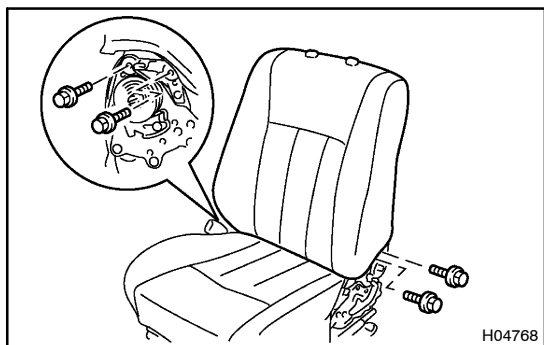


- (c) Remove the 4 bolts and seatback assembly.

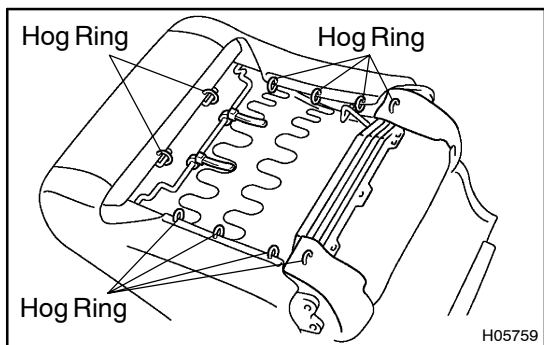

10. w/ Seatback board:

REMOVE SEATBACK FRAME


- (a) Remove the 10 hog rings and 2 clamps.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback frame from the seatback cover with pad.

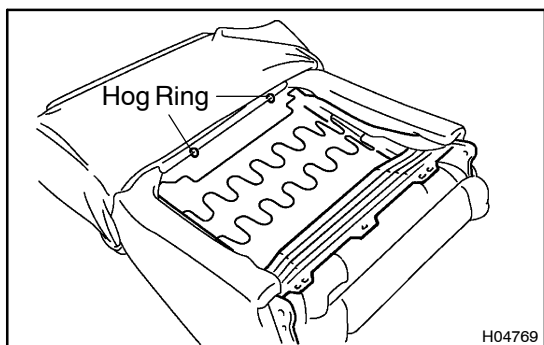

11. w/o Seatback board:

REMOVE SEATBACK FRAME

- (a) Remove the 2 hog rings.
- (b) Remove the headrest support.
- (c) Remove the seatback frame.

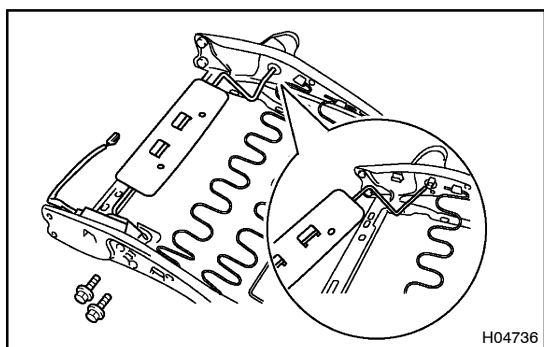

12. w/ Lumbar support:

REMOVE LUMBER SUPPORT

Remove the 2 bolts and lumbar support.


13. REMOVE SEATBACK COVER

Remove the seatback cover from the seatback pad.

14. w/ Seat heater:


IF NECESSARY, REPLACE SEATBACK HEATER

(See page BO-34)

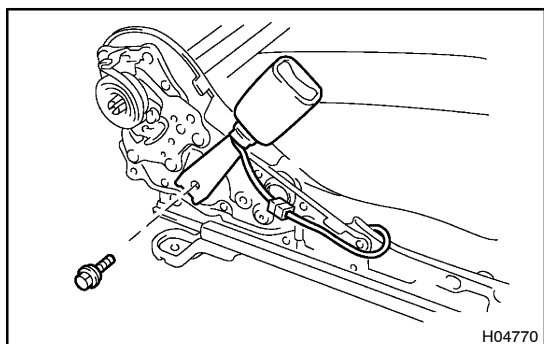


15. REMOVE FRONT SEAT INNER BELT

- (a) Disconnect the connector, then remove the clamp.
- (b) Remove the bolt, wave washer and front seat inner belt.

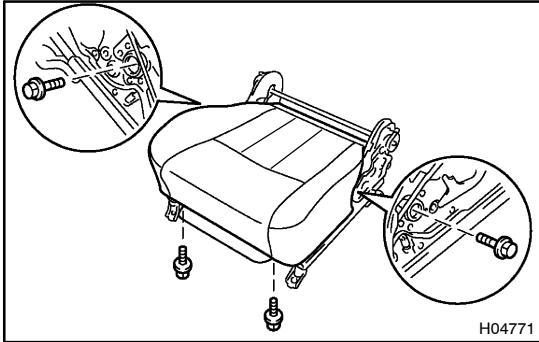**16. REMOVE SEAT CUSHION ASSEMBLY**

- (a) Remove the 4 bolts.
- (b) Remove the wire harness clamps from the seat cushion assembly.

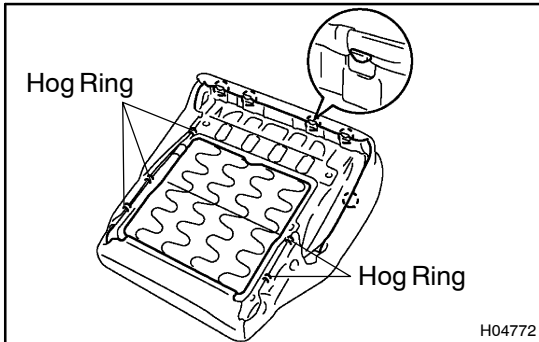**17. REMOVE SEAT CUSHION FRAME**


- (a) Remove the wire harness.
- (b) Disengage the hook.
- (c) Remove the 5 hog rings.

18. REMOVE SEAT CUSHION COVER


Remove the 10 hog rings and seat cushion cover.

19. w/ Seat heater:

IF NECESSARY, REPLACE SEAT CUSHION HEATER
(See page BO-34)

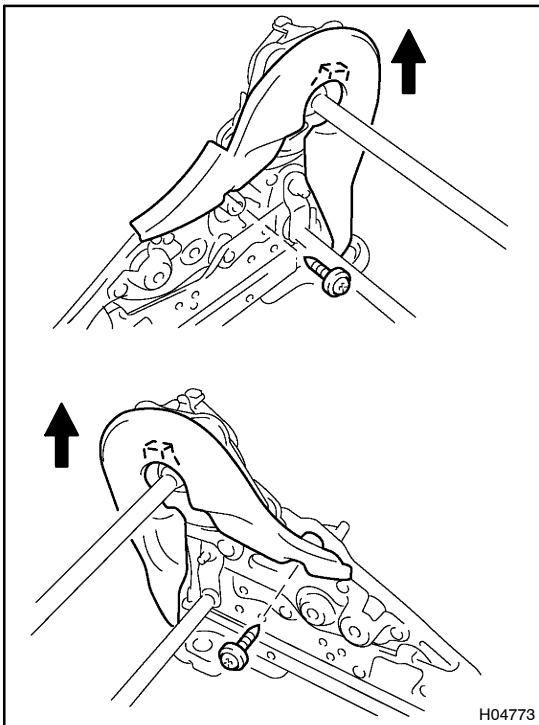**20. REMOVE RECLINING ADJUSTER INSIDE COVER**

- (a) Remove the screw and LH reclining adjuster inside shield.
- (b) Remove the screw and RH reclining adjuster inside shield.

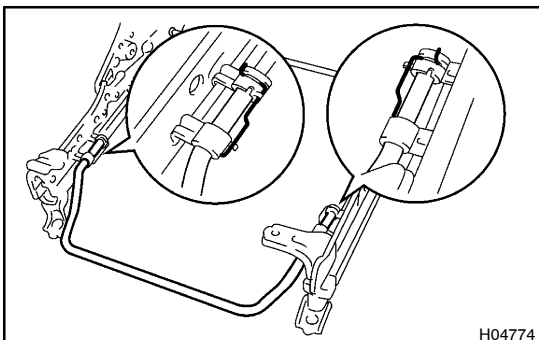**21. REMOVE SEAT TRACK ADJUSTER HANDLE**

- (a) Using a screwdriver, remove the 2 springs.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the seat track adjuster handle.

22. REMOVE REAR SEAT TRACK RETAINER

Remove the 4 bolts and rear seat track retainer.

23. REMOVE RECLINING CONNECTING PIPE

Remove the reclining connecting pipe.

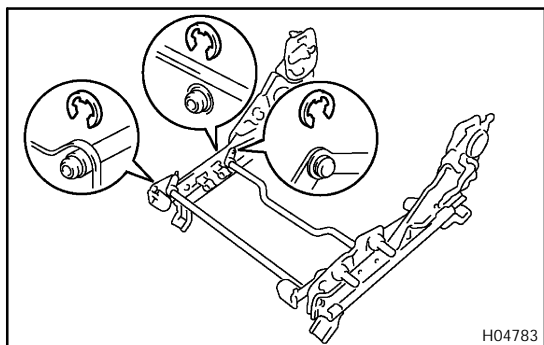**24. Vertical adjuster type:****REMOVE INNER SEAT ADJUSTER**

Remove the 3 E-rings and inner seat adjuster.